

Absolute

Step by Step Installation Guide



Creative Drain Solutions™

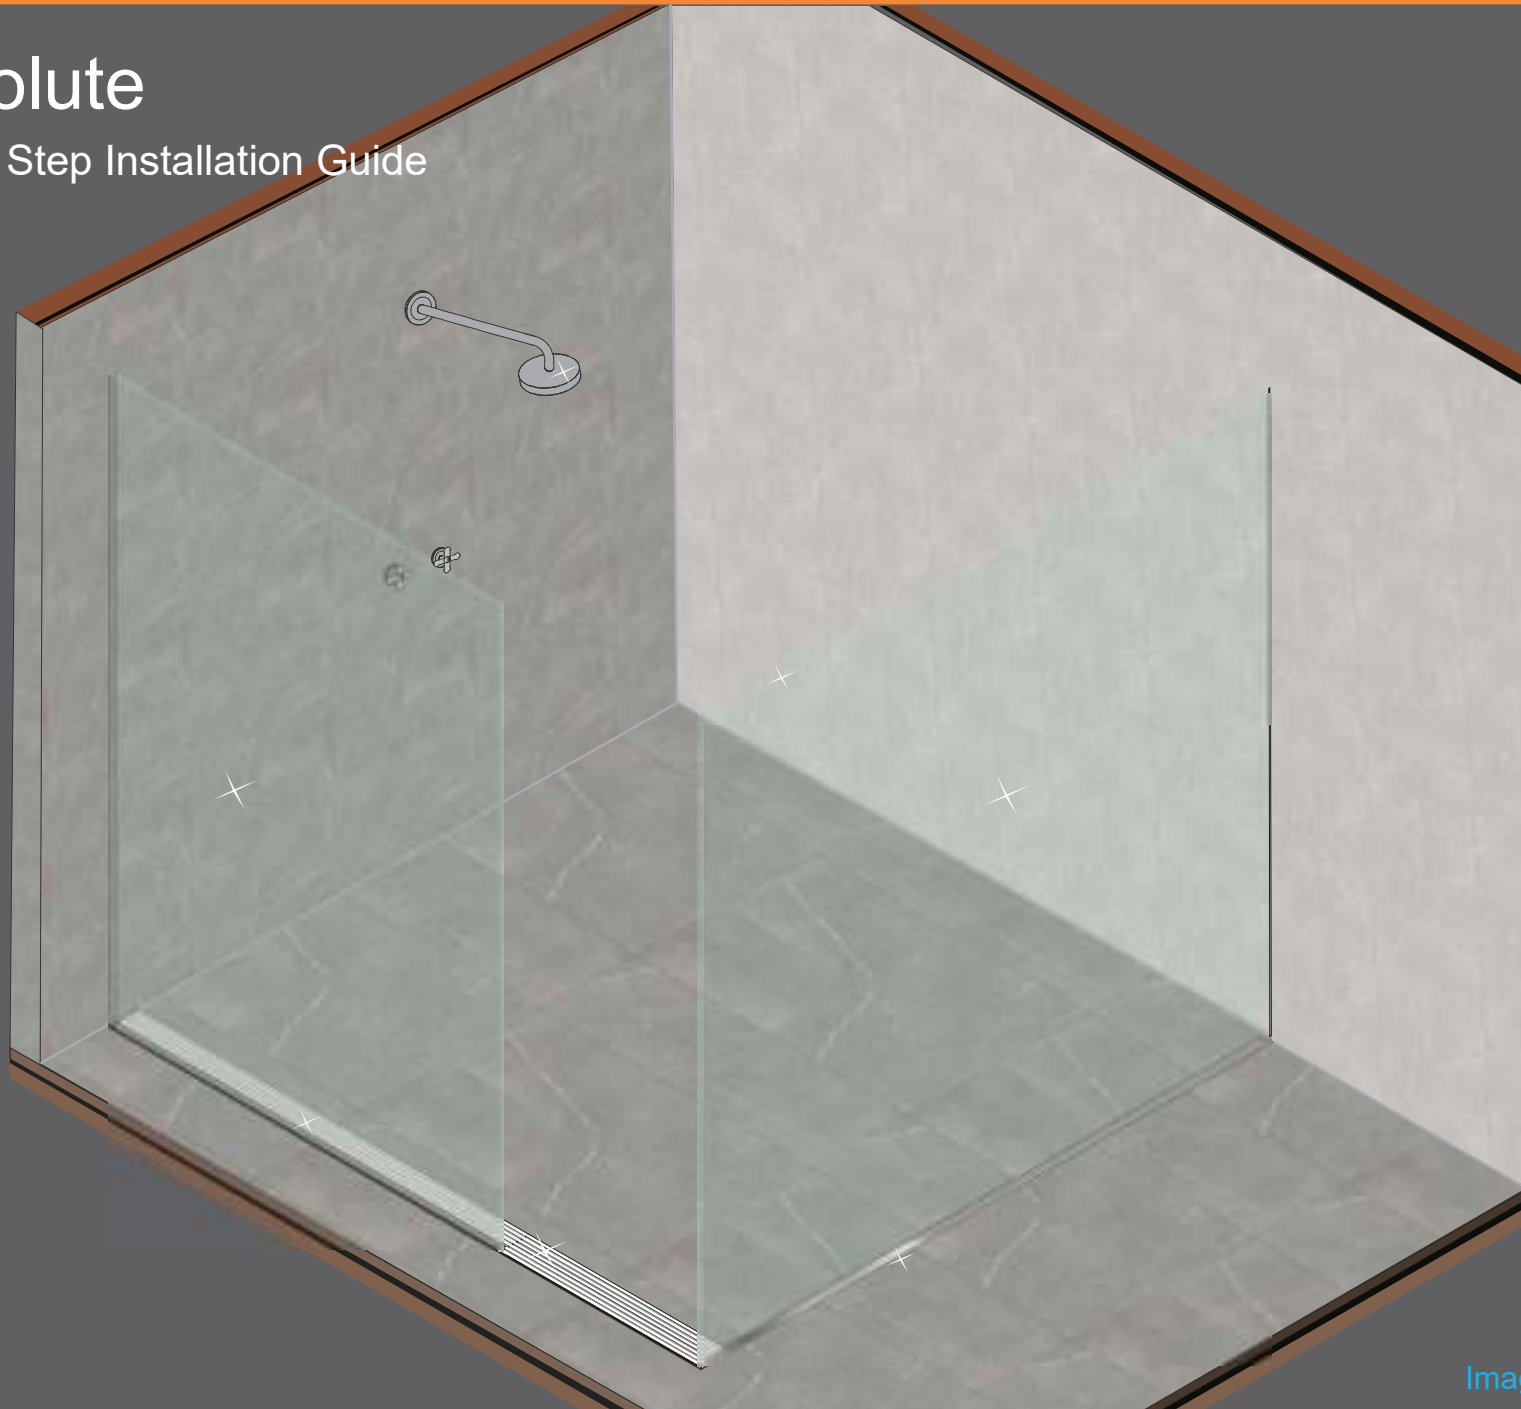


Image of installed final product

Disclaimer: These drawings are the intellectual property of Creative Drain Solutions. This information is indicative only. Creative Drain Solutions accepts no liability arising from the use of this information.

Creative Drain **Solutions**

Ph: (03) 9758 0588


createdrainsolutions.com.au



Creative Drain Solutions™

S T E P

1

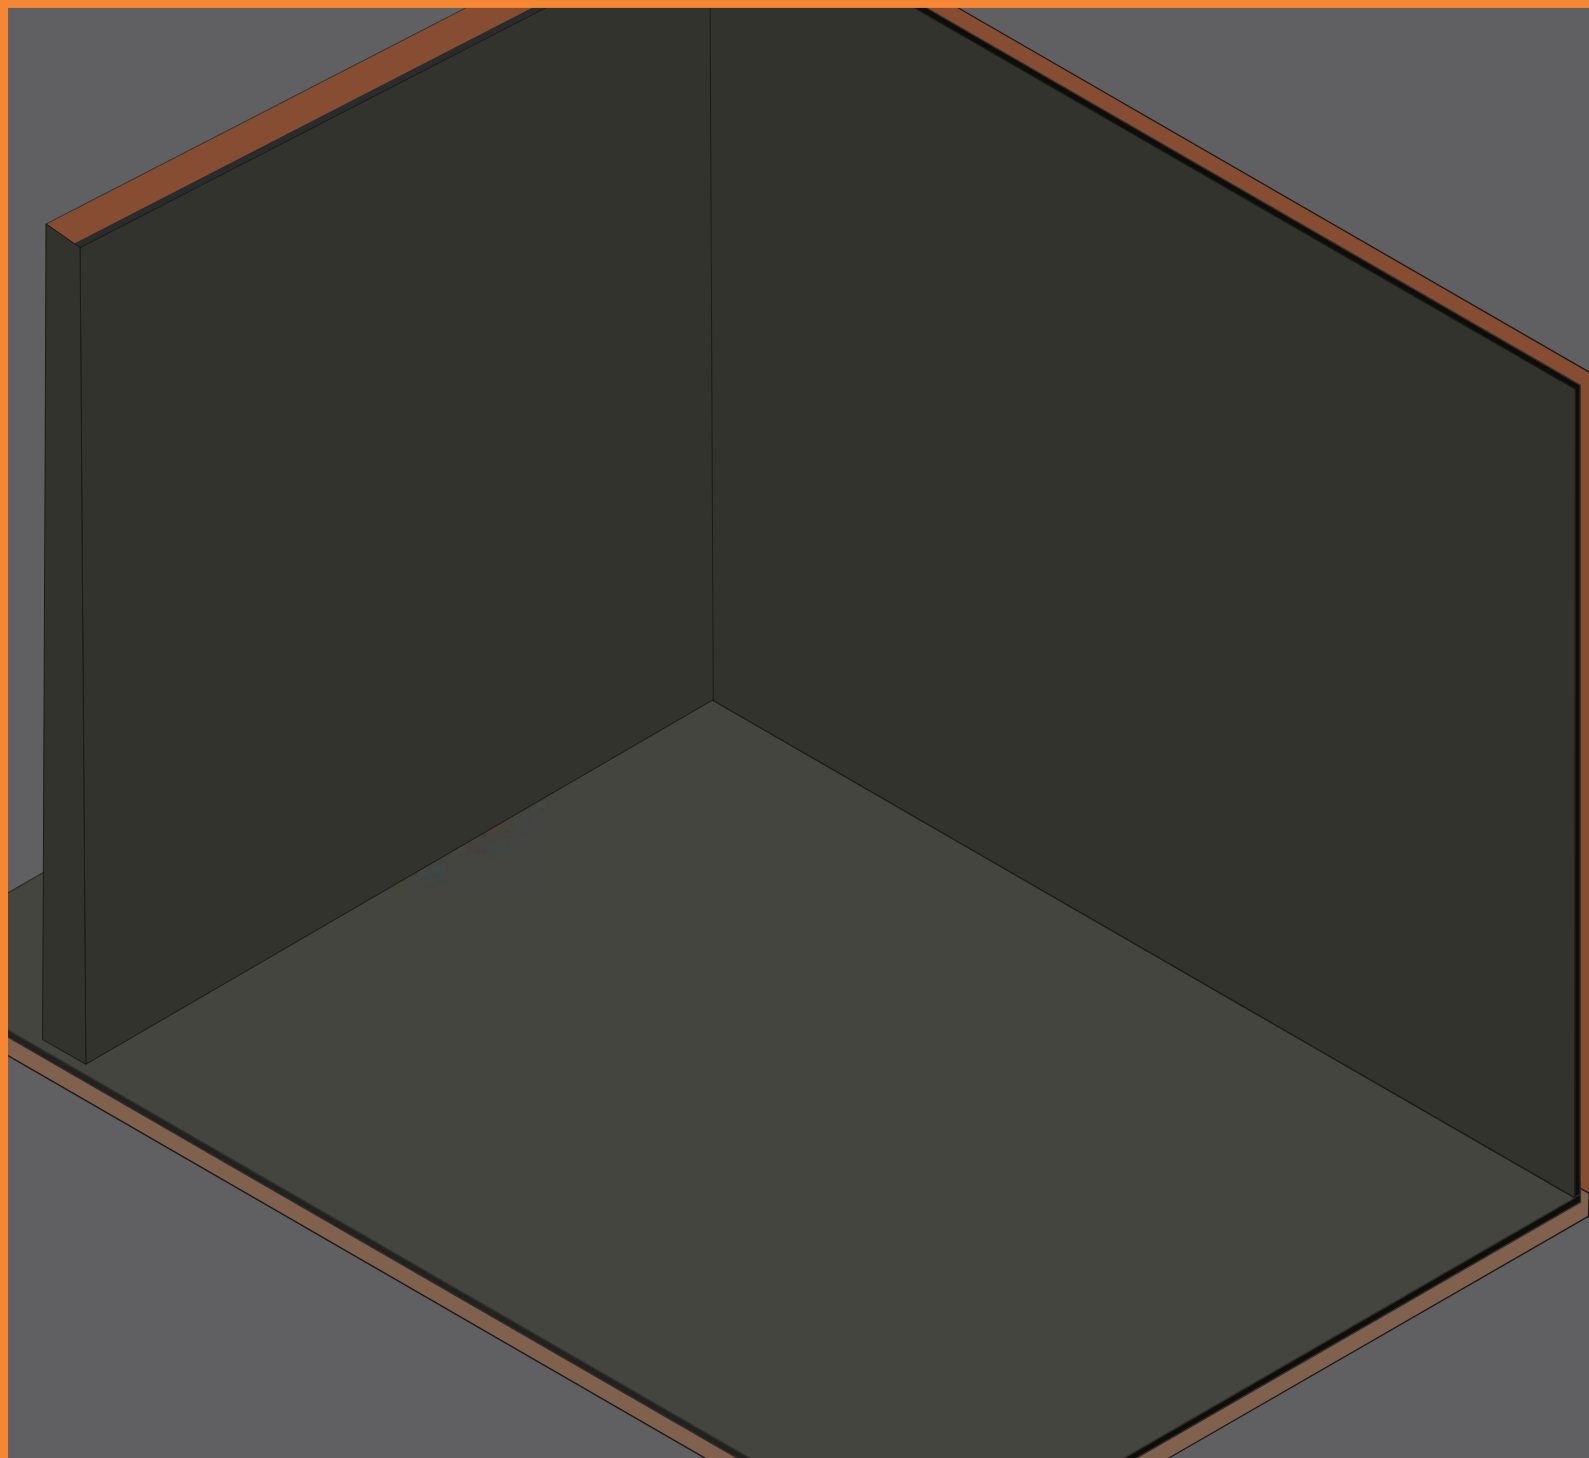


Install cement sheet /
WR Board to wall and
floor area.



Creative Drain Solutions™

STEP

2

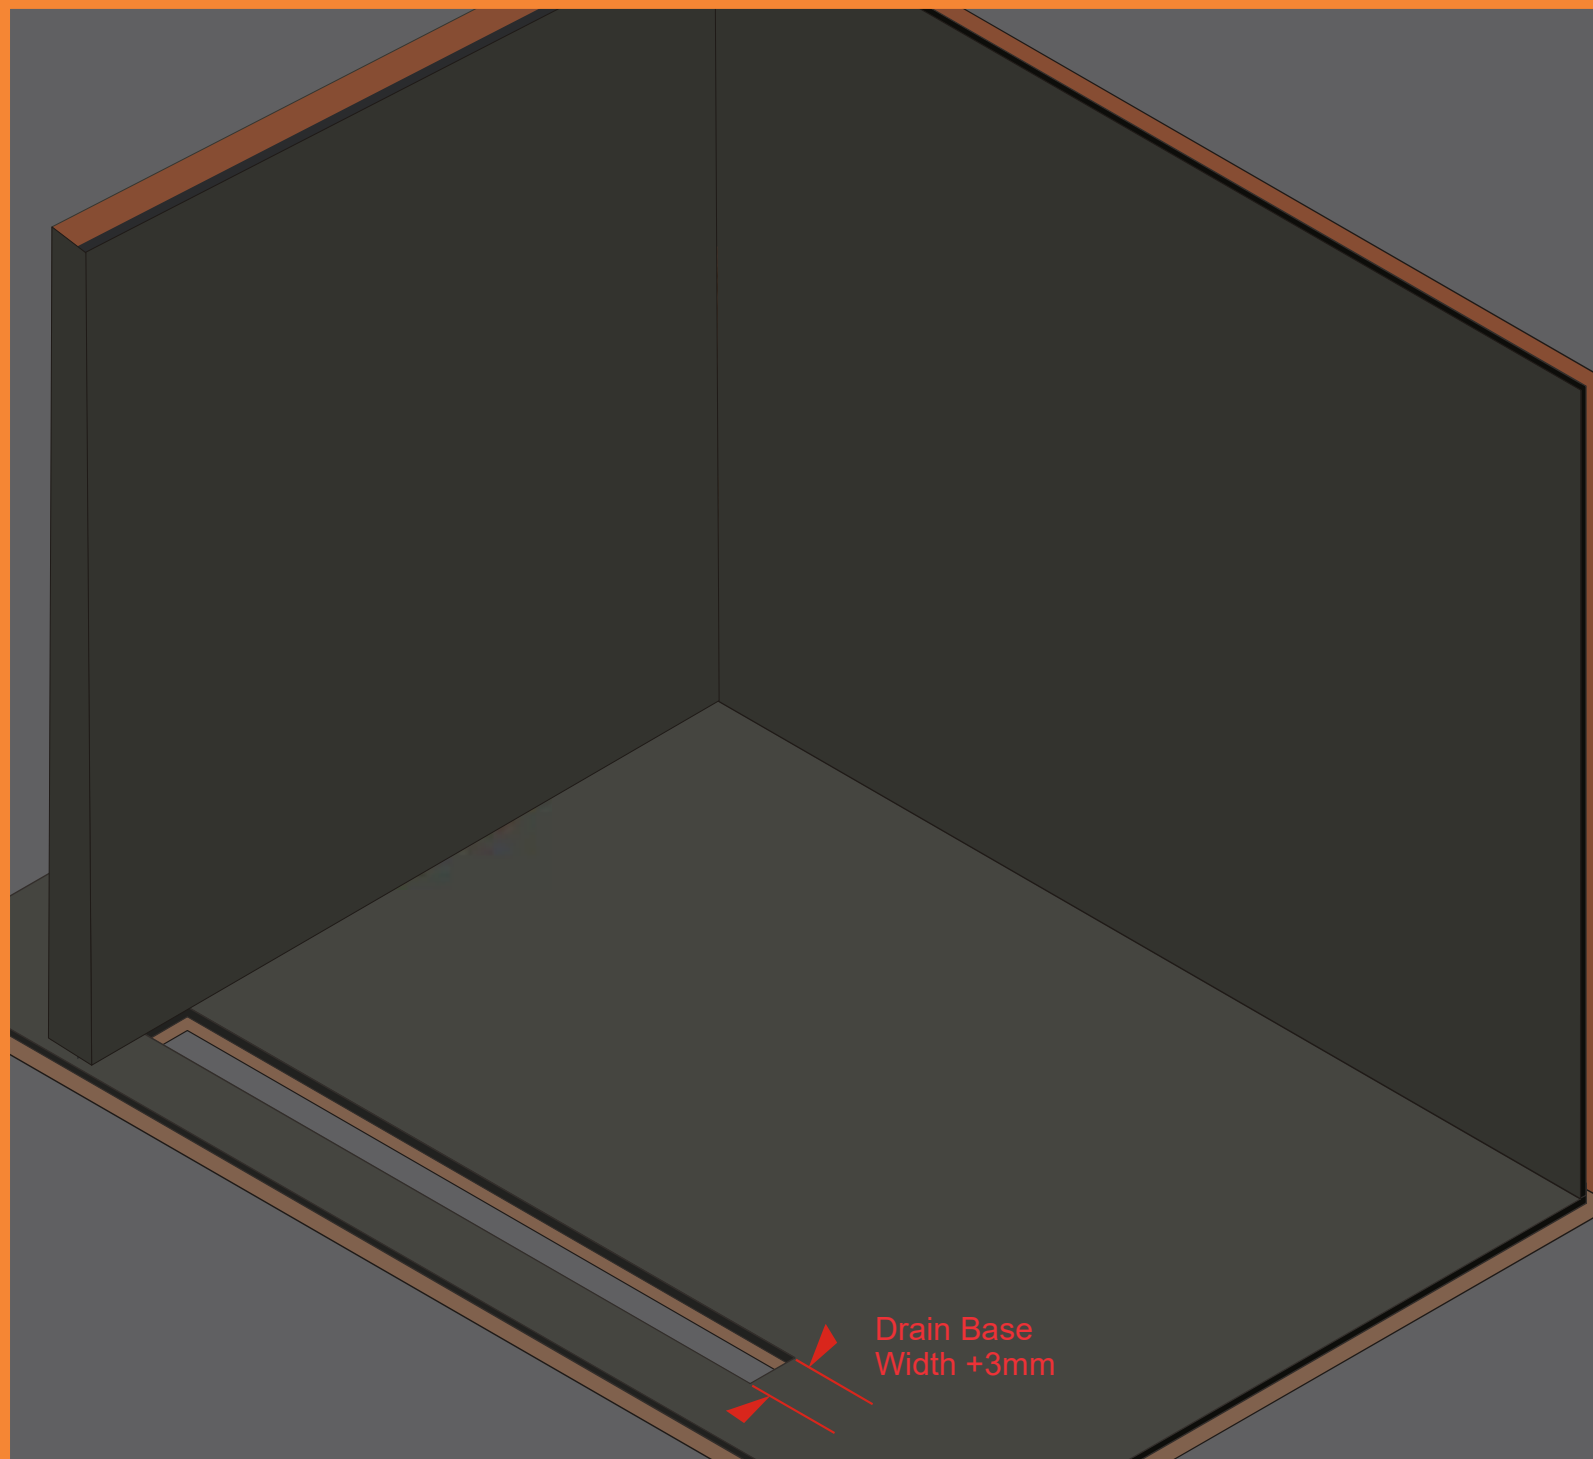

Cut the rebate for the drain base out of the floor.


Fit additional noggins if required to support the floor between joists.



Creative Drain Solutions™

STEP

3

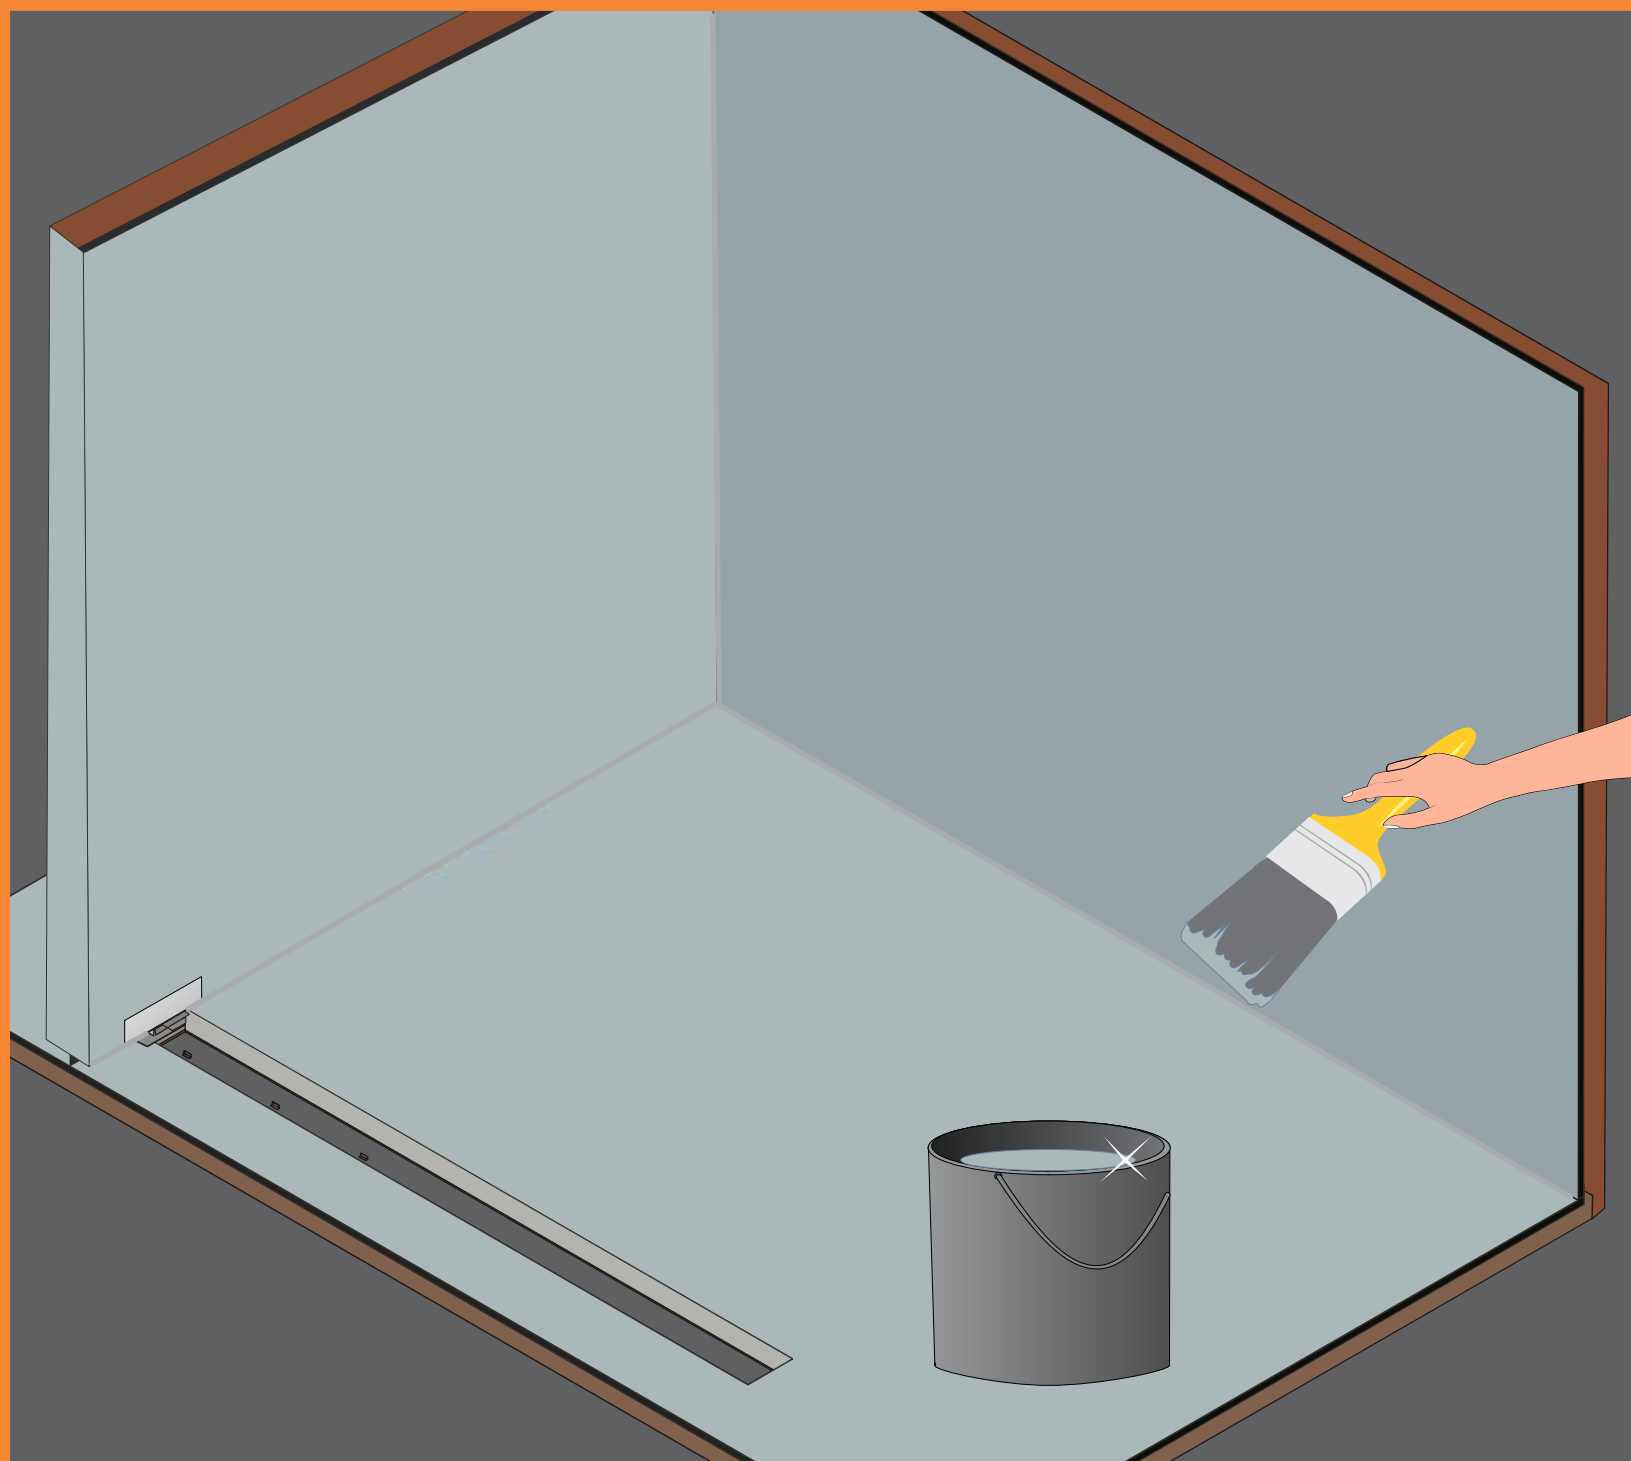


Once the underlay is installed, clean the entire floor area. Apply a suitable surface primer to the boards and when dry, apply a propriety waterproofing compound ie acrylic or polyurethane.



Creative Drain Solutions™

STEP

4

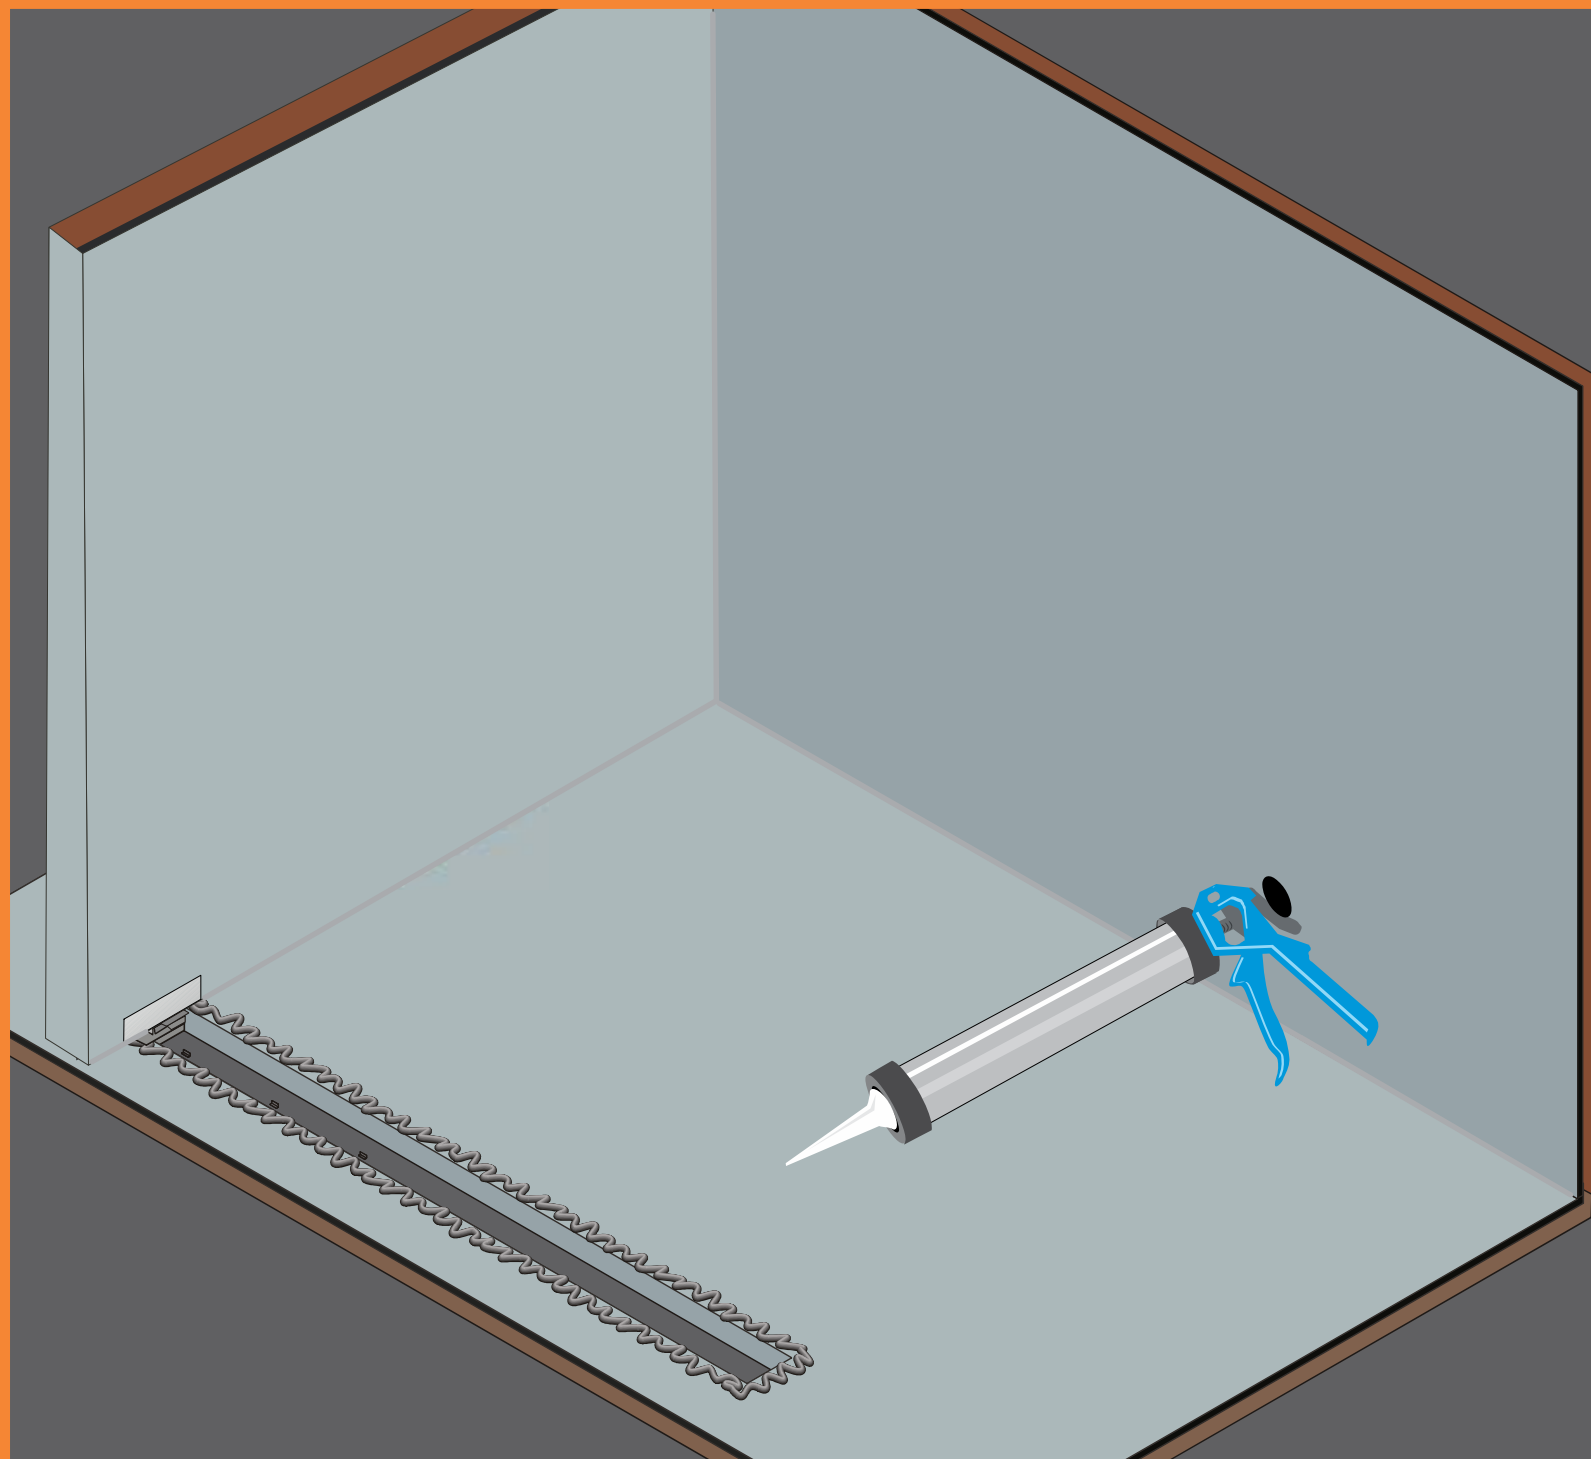

The drain and 'F' flashing should be temporarily fitted and marked around. Rebate the board by 2mm where required to allow the drain flashing to be flush with the top of the board.


Apply polyurethane adhesive/sealant around the rebate area.



Creative Drain Solutions™

STEP

5

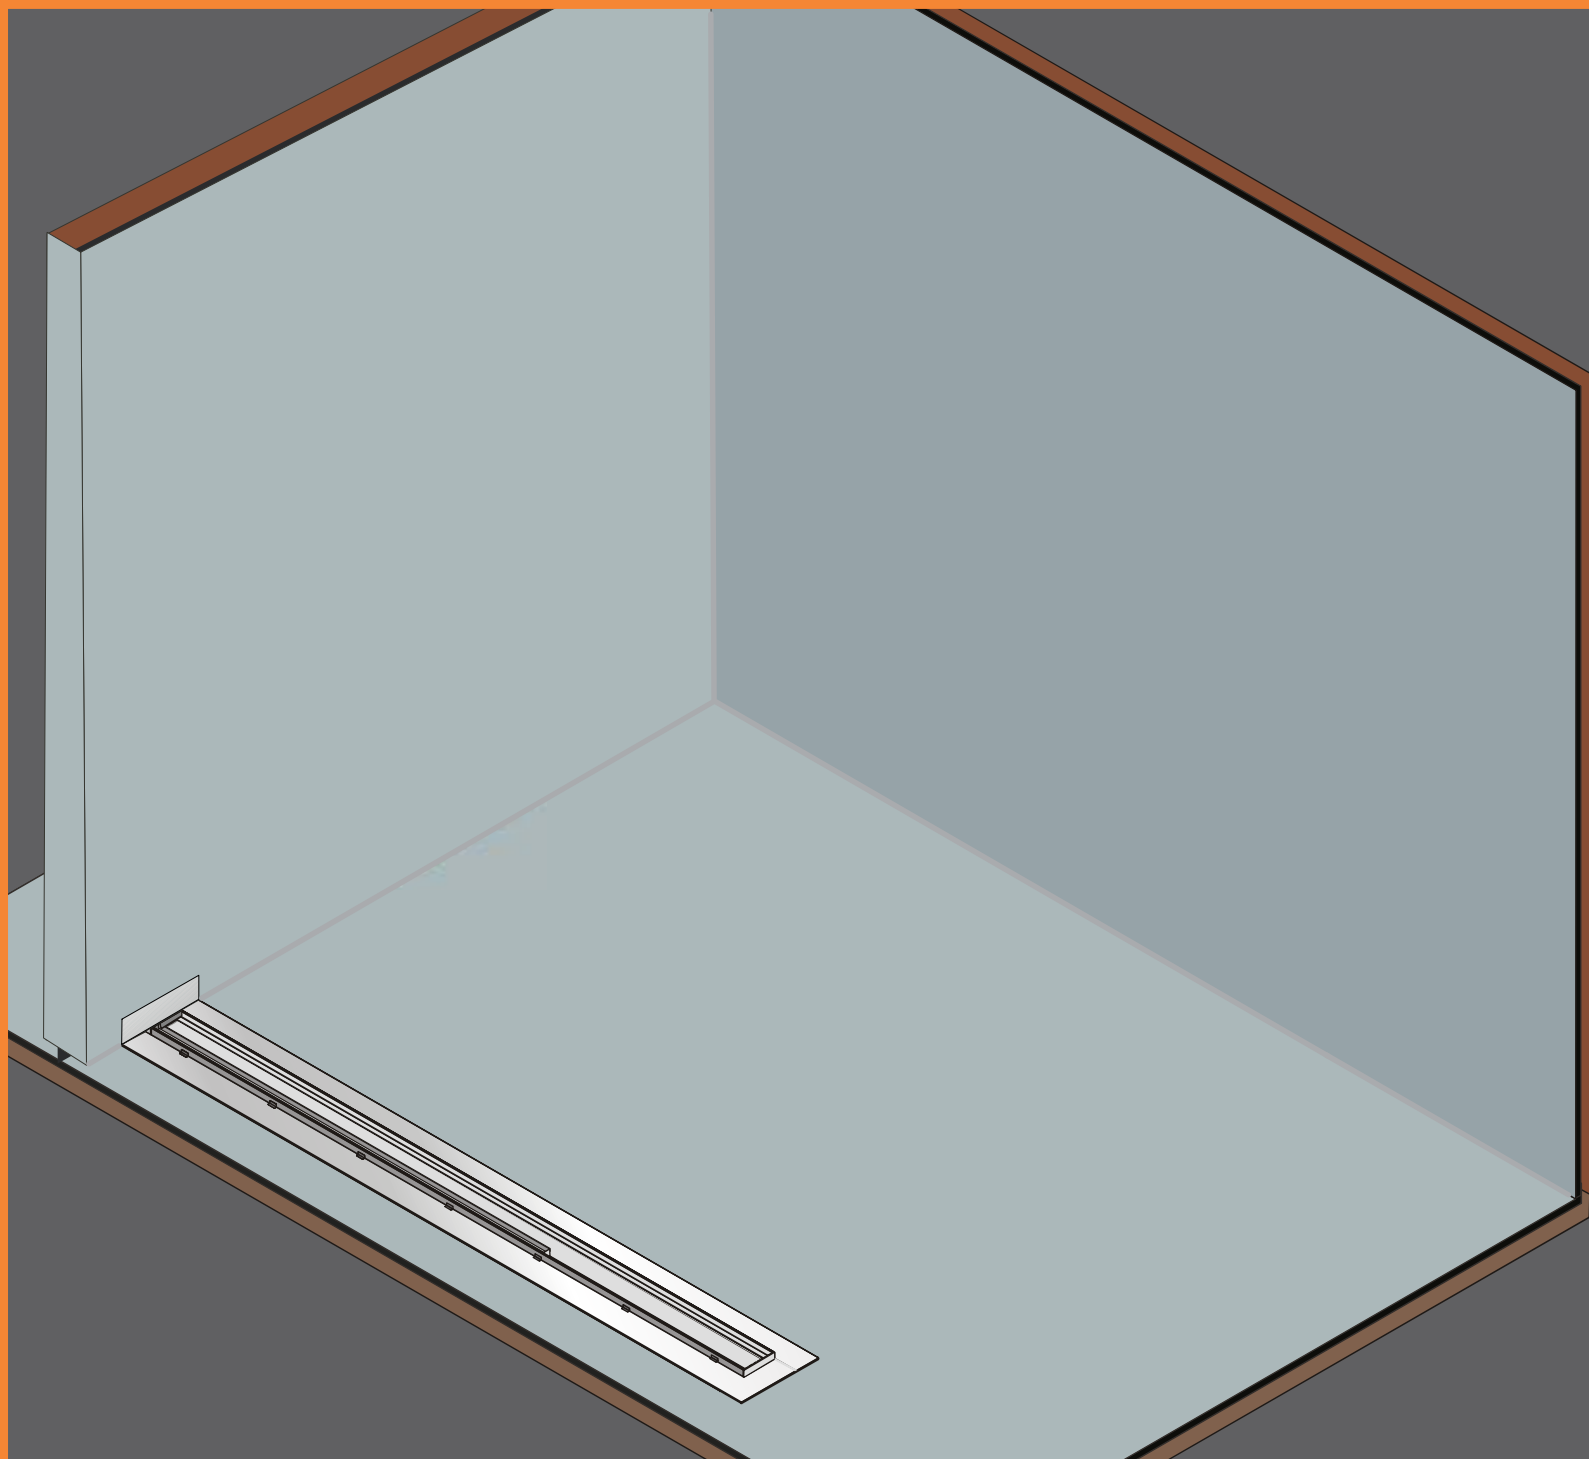

Install the drain into place over the polyurethane adhesive/sealant ensuring the drain is level.


Fix in place with stainless steel screws, filling each hole with adhesive/sealant and covering each screw following fixing.



Creative Drain Solutions™

STEP

6

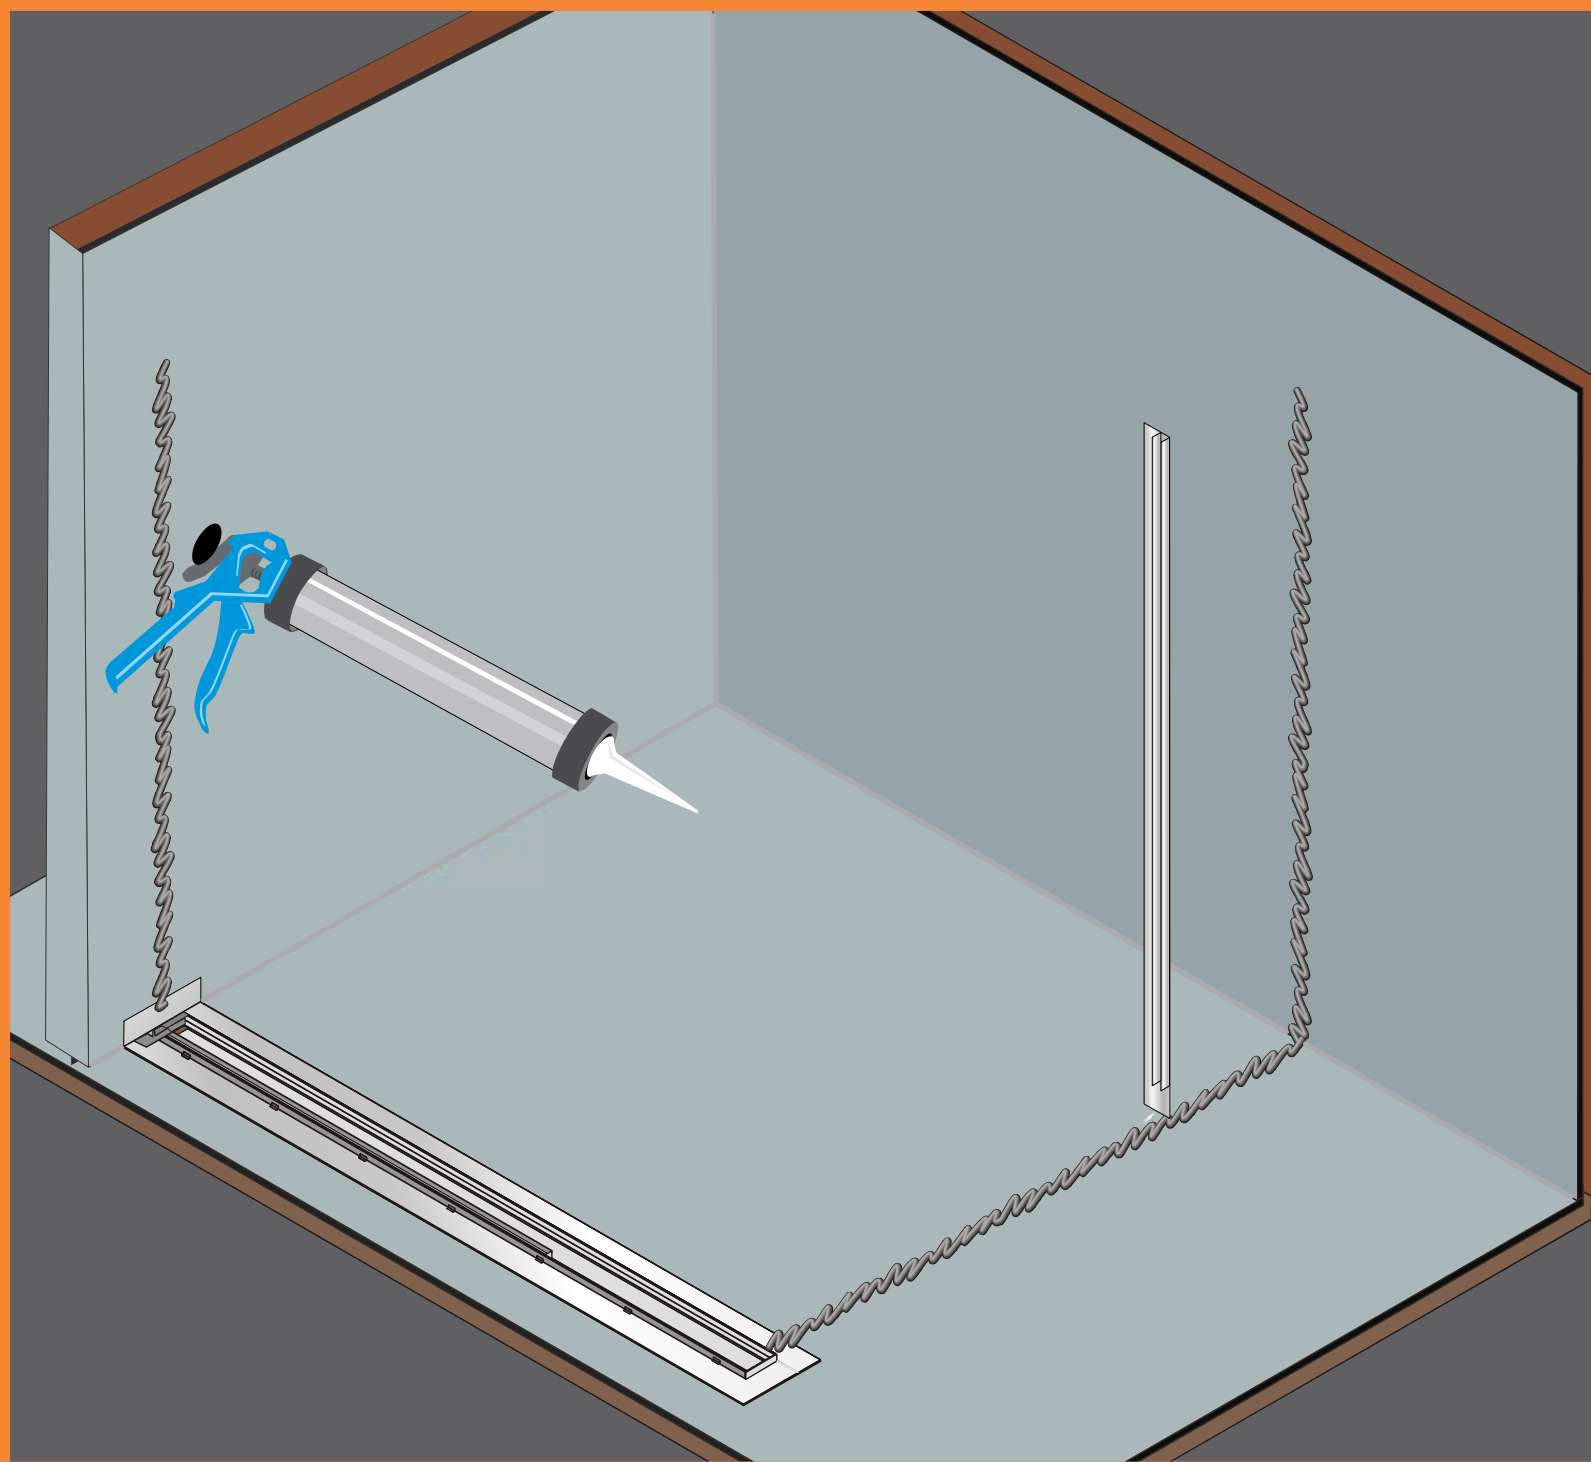


Apply polyurethane adhesive / sealant to areas where the wall and floor flashing will be installed



Creative Drain Solutions™

STEP

7

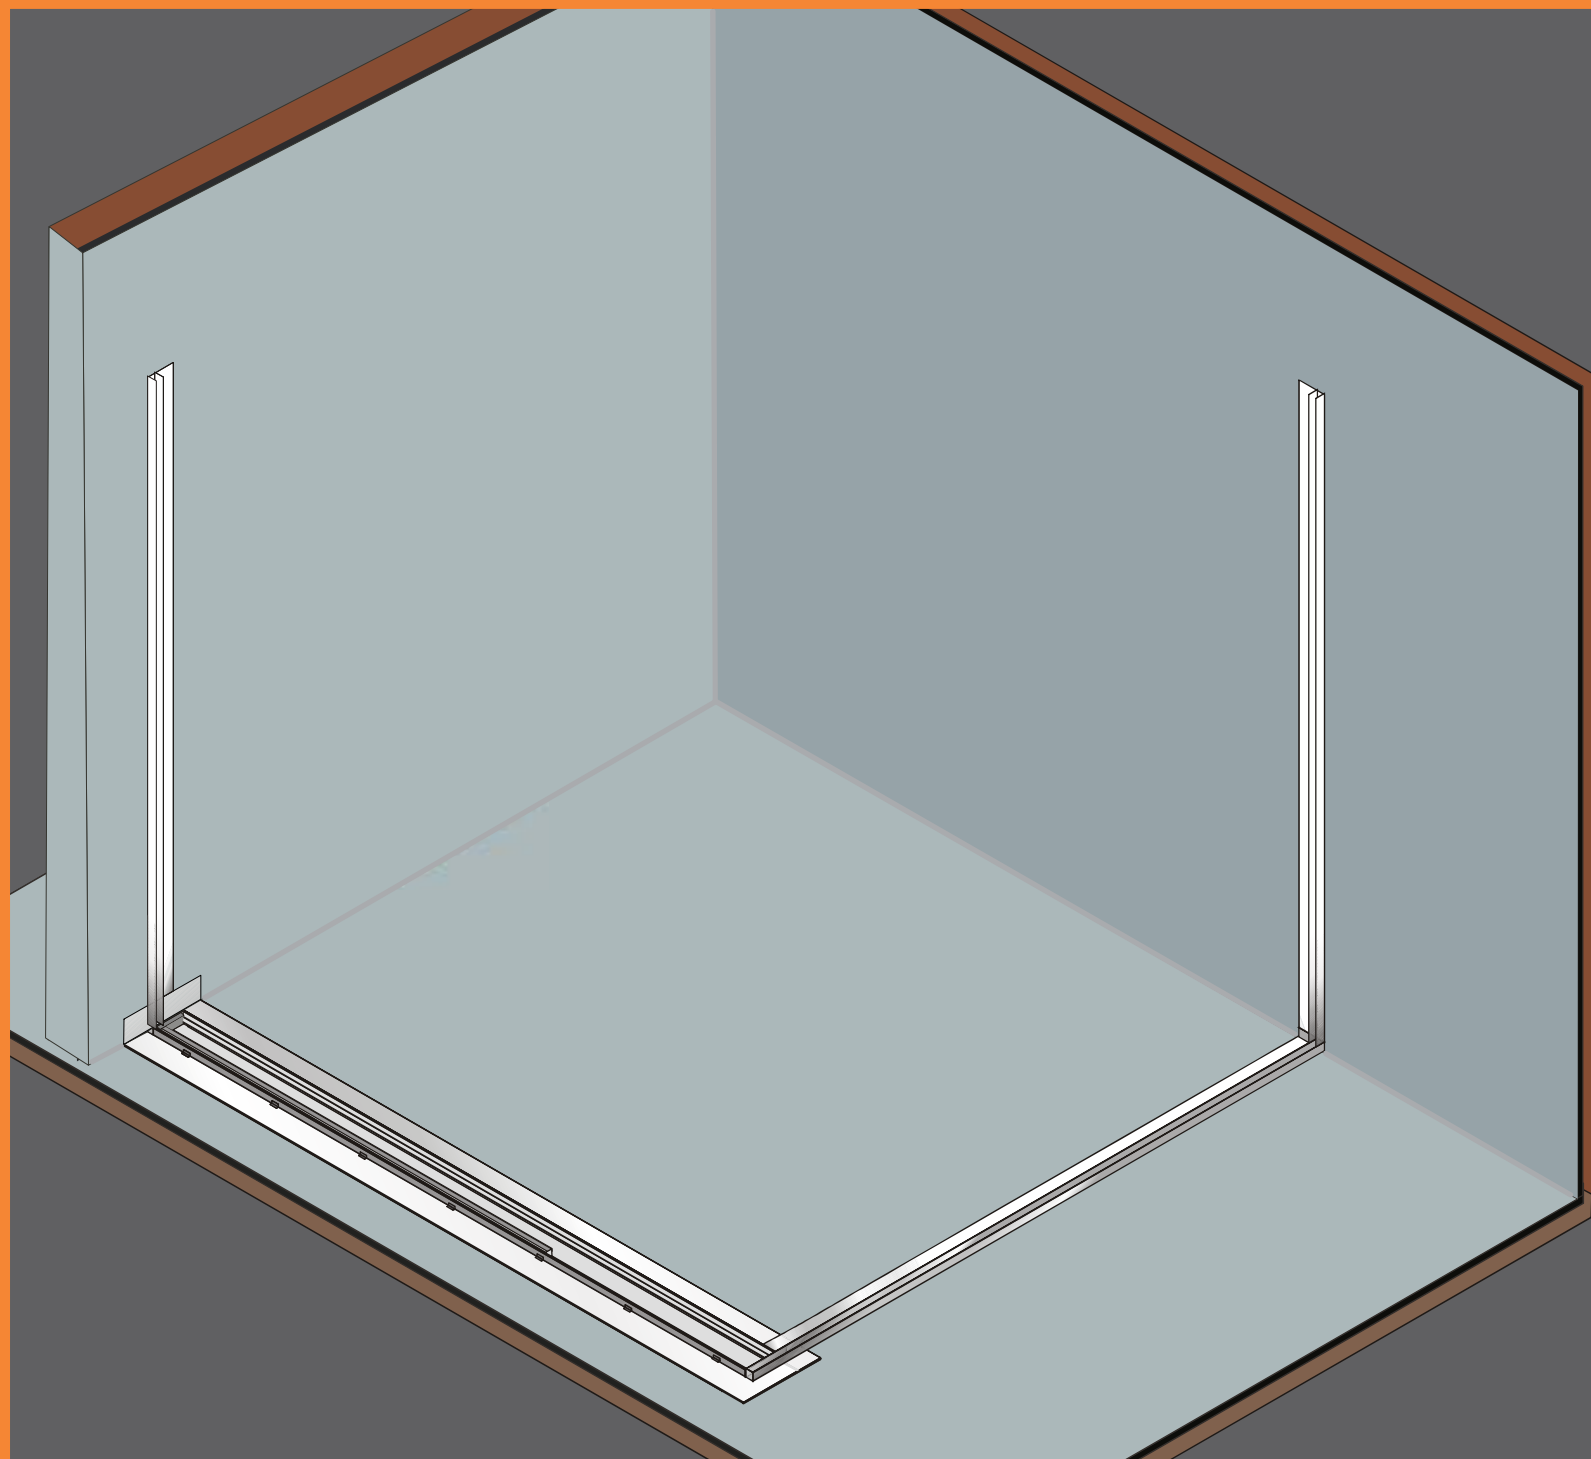


Install wall and floor flashings. Use only stainless steel screws, filling each hole with adhesive/sealant covering each screw following fixing.



Creative Drain Solutions™

STEP

8

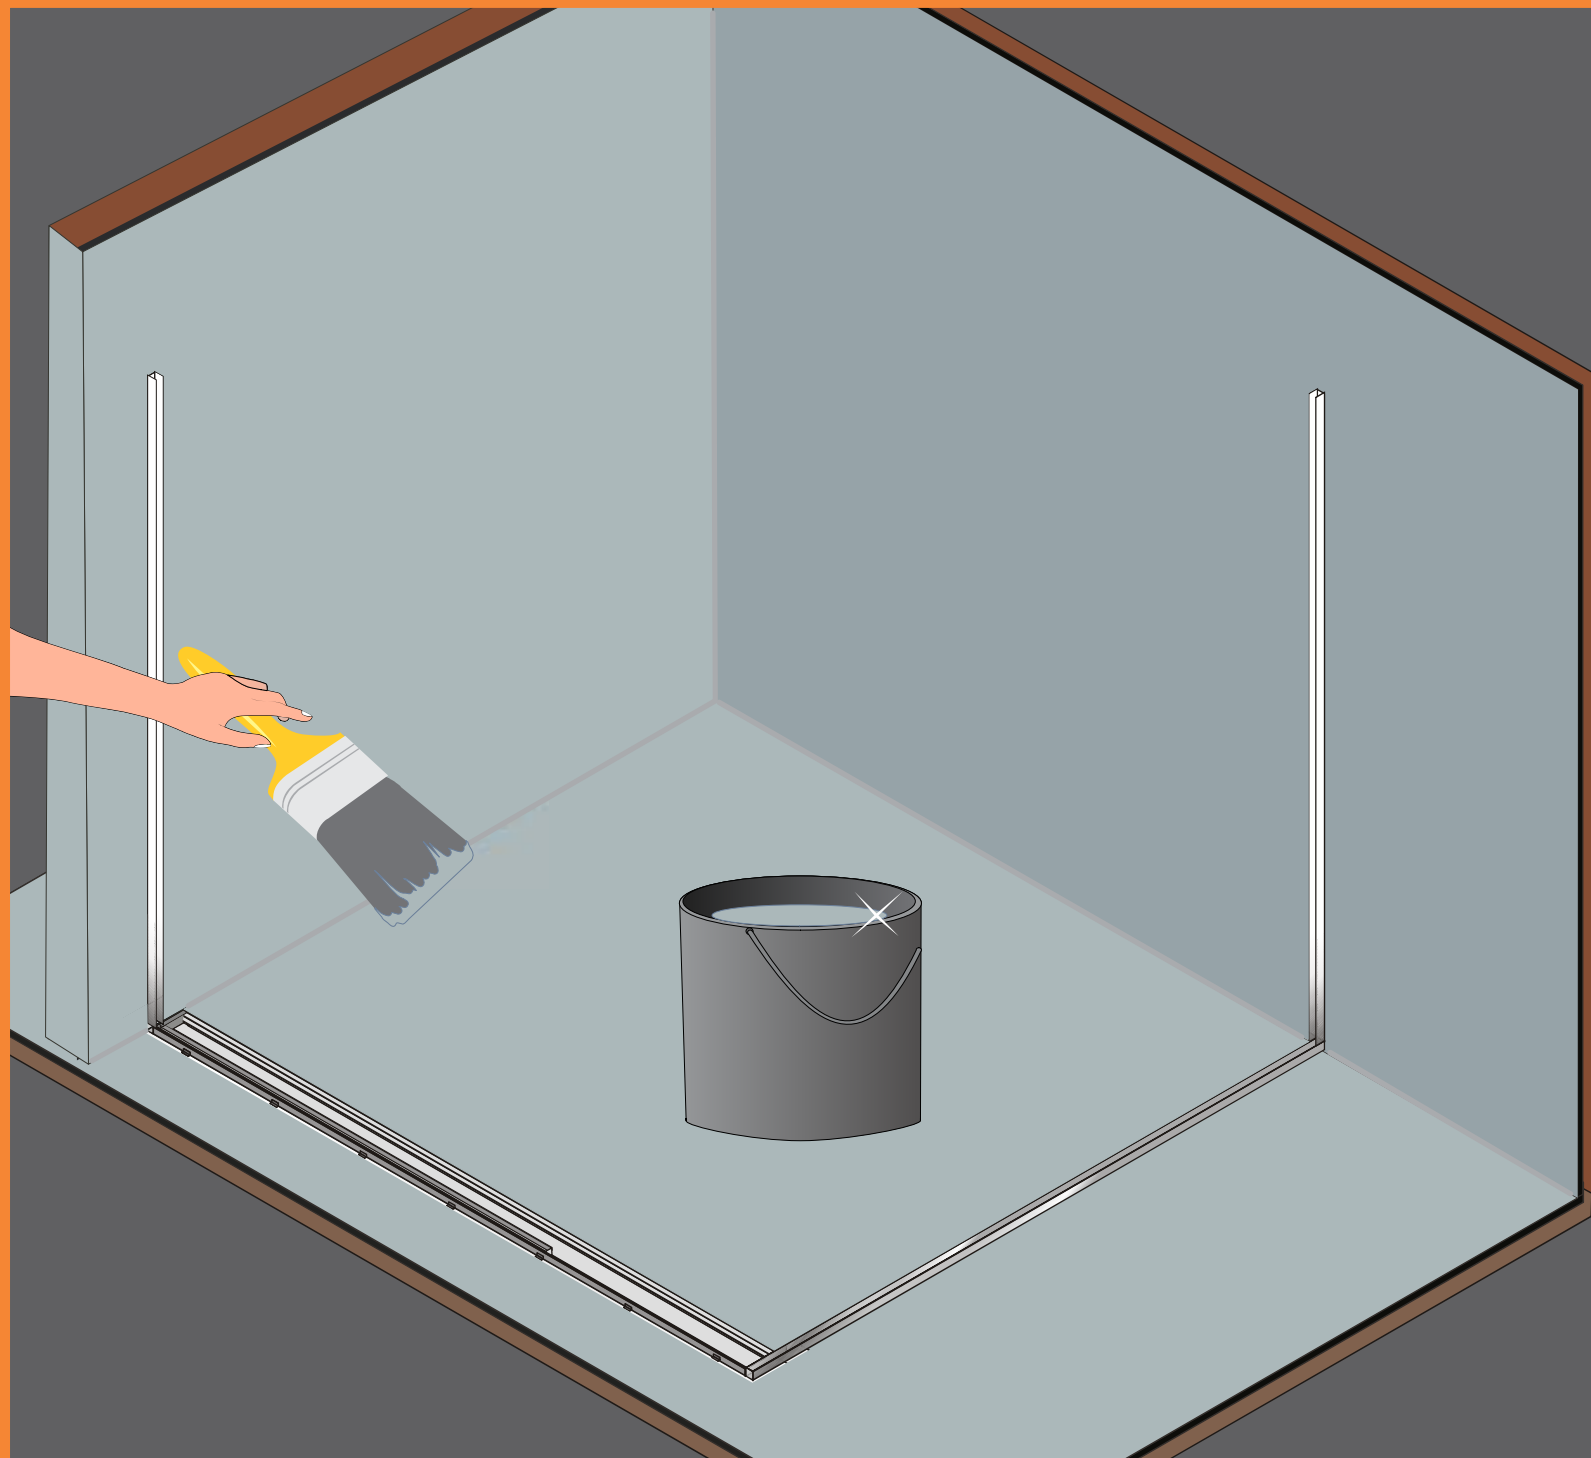


Apply another coat of waterproofing to the area covering the flashings.



Creative Drain Solutions™

STEP

9

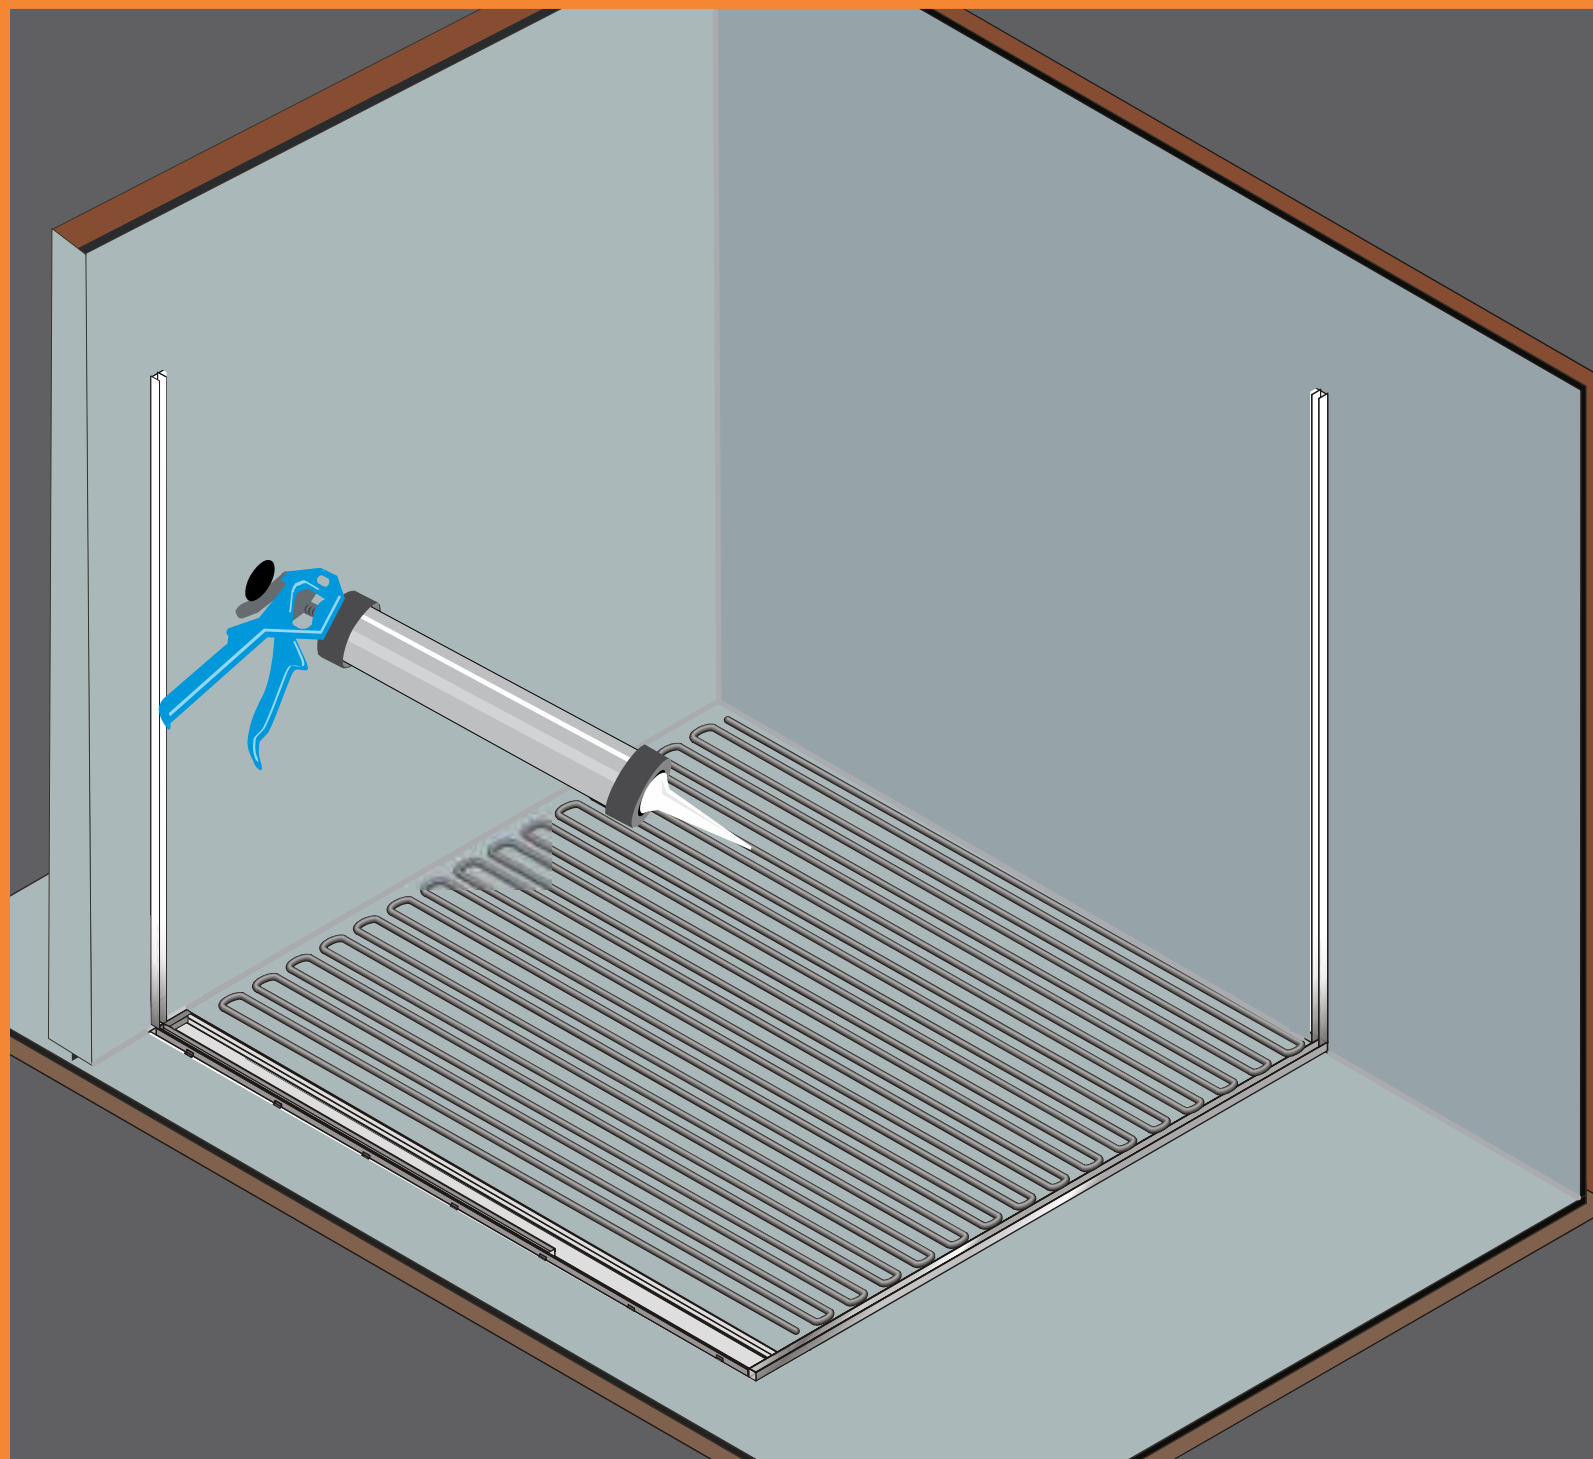

For quick and easy installation we recommend the use of Graded Construction Board to create fall in your wet area.


Apply a polyurethane adhesive / sealant onto the base area that the graded construction board will be applied.



Creative Drain Solutions™

STEP

10

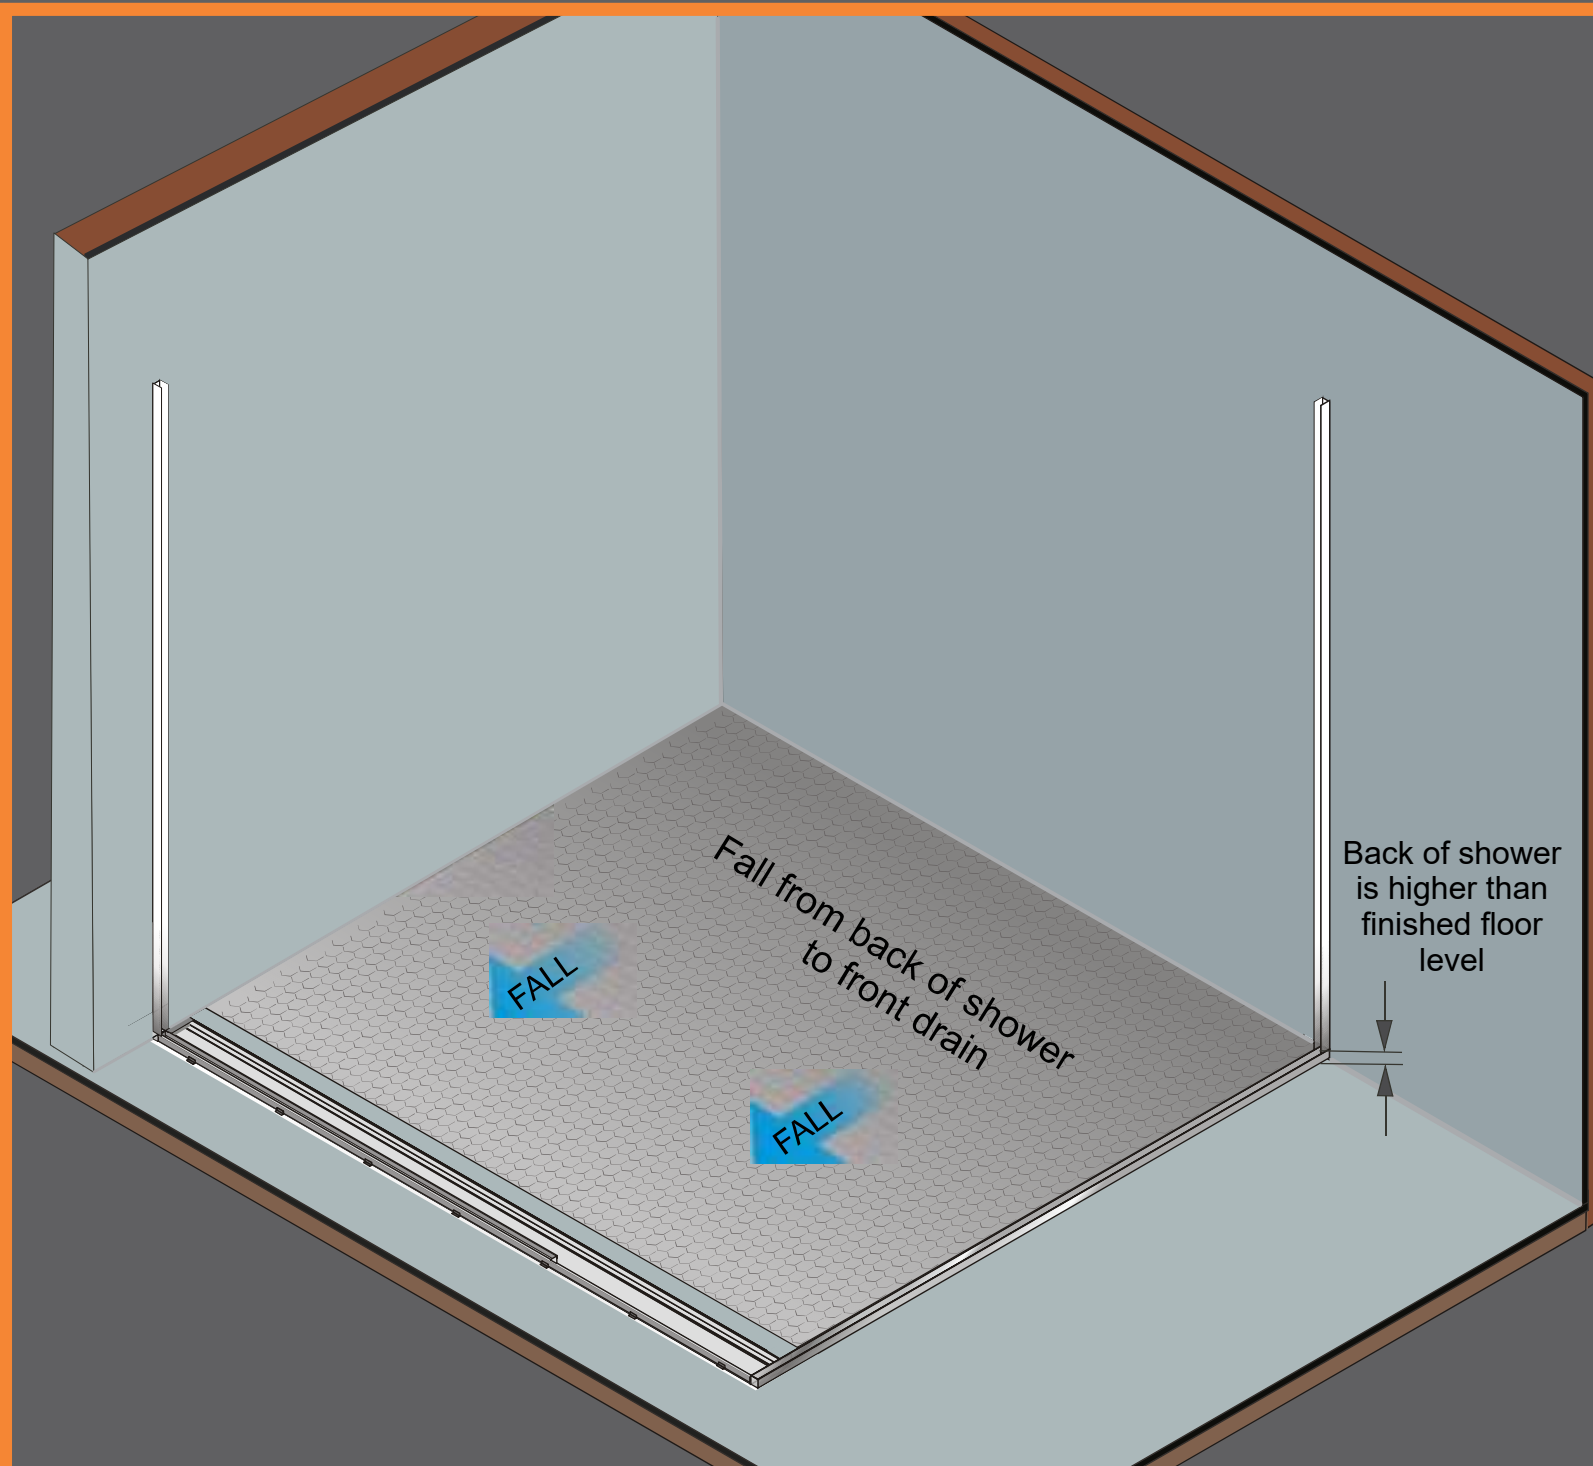

Install graded construction board into place while the adhesive/sealant is still wet. Ensure a good adhesion between the construction board and floor by pressing down over the entire surface and using weights until cured.


Note: the edge of the construction board must not be closer than 50mm to the face of the tile lip.



Creative Drain Solutions™

STEP

11

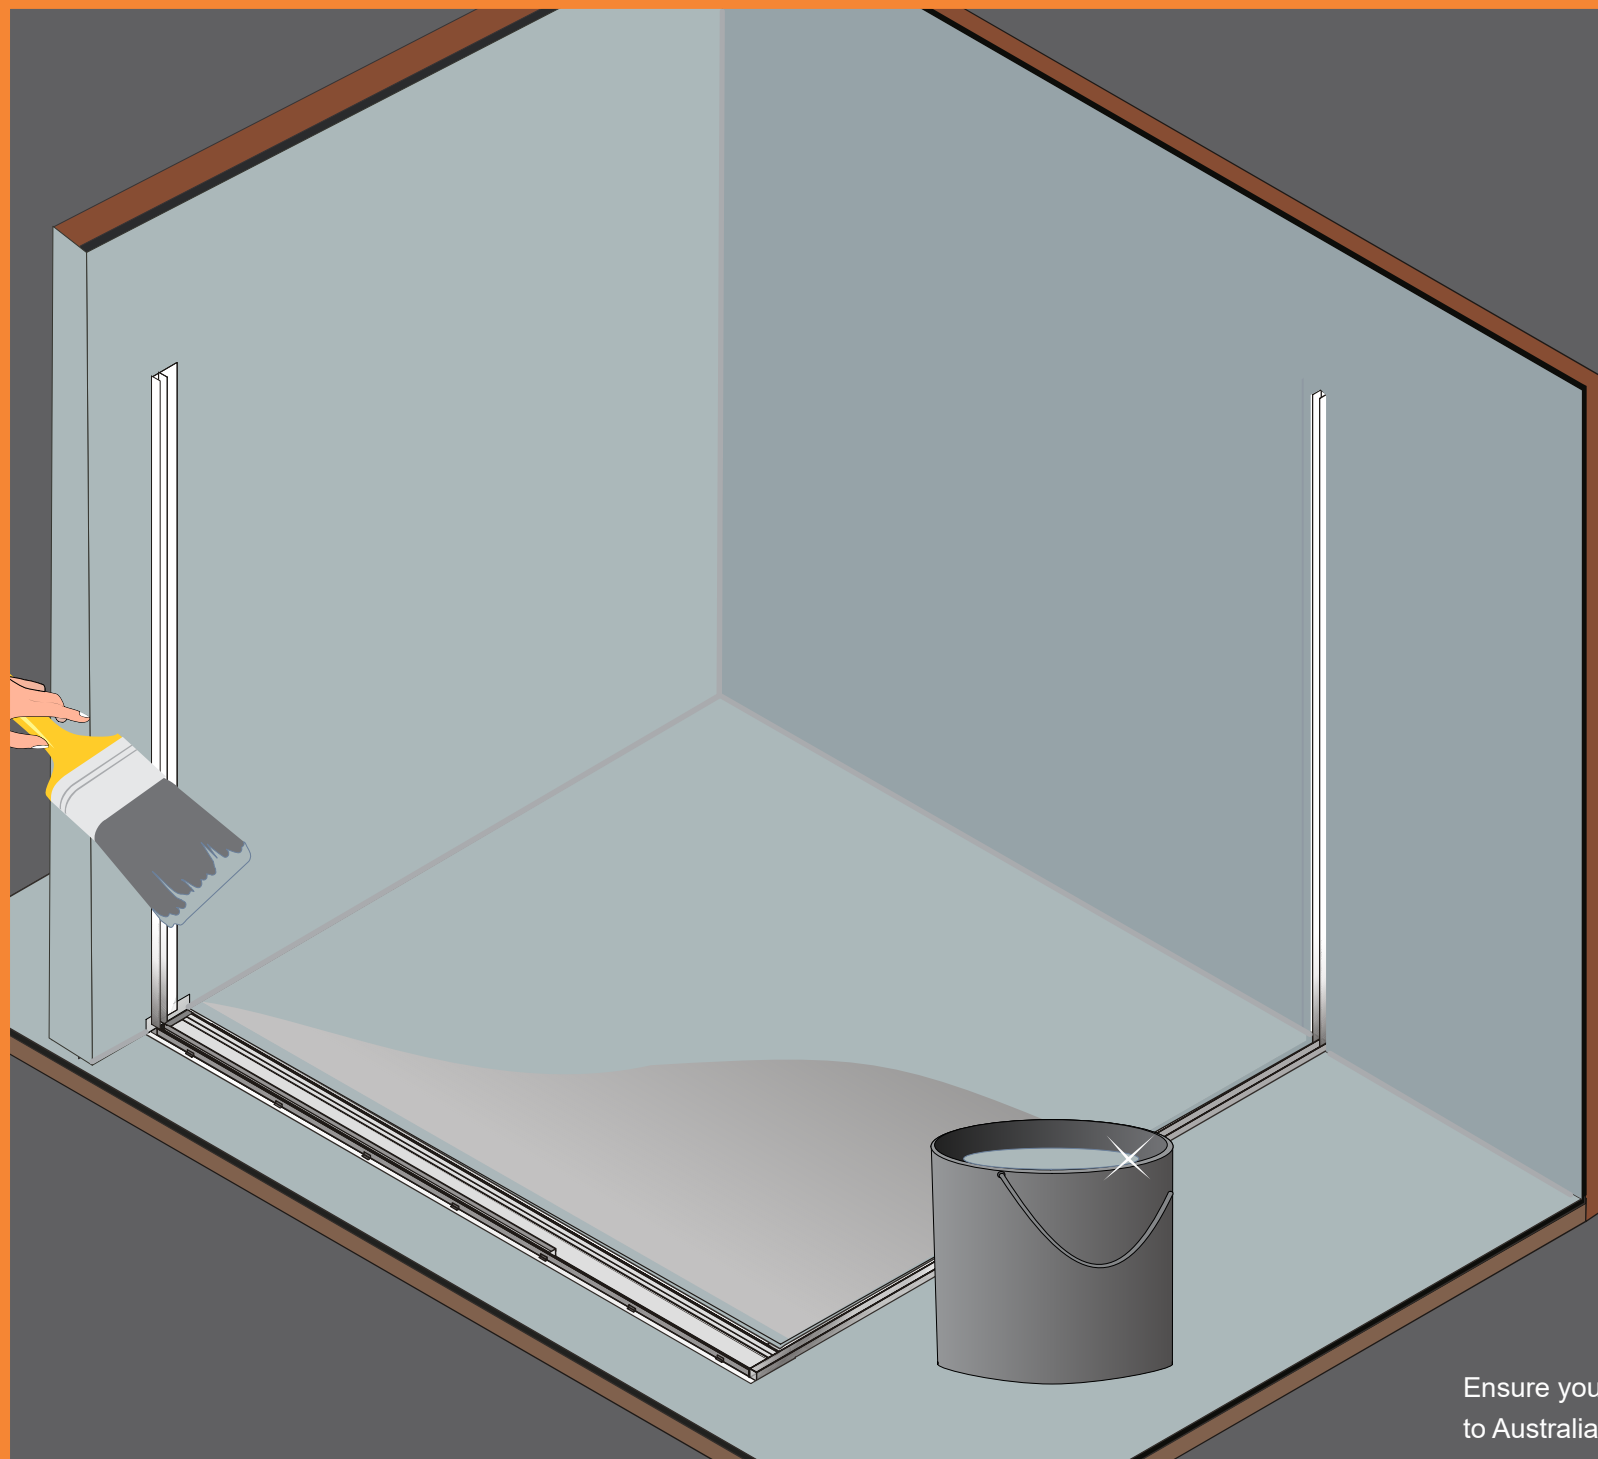

Once the construction board is fixed in place, install 2 more coats of propriety waterproofing (Refer to manufacturers specifications) to all shower base wall and floor areas, and the floor outside the shower as shown.

Important: Do not block the weep holes with waterproofing.


Ensure you waterproof all of the bathroom areas to Australian Standards ASA 3740-2010.



Creative Drain Solutions™

STEP

12

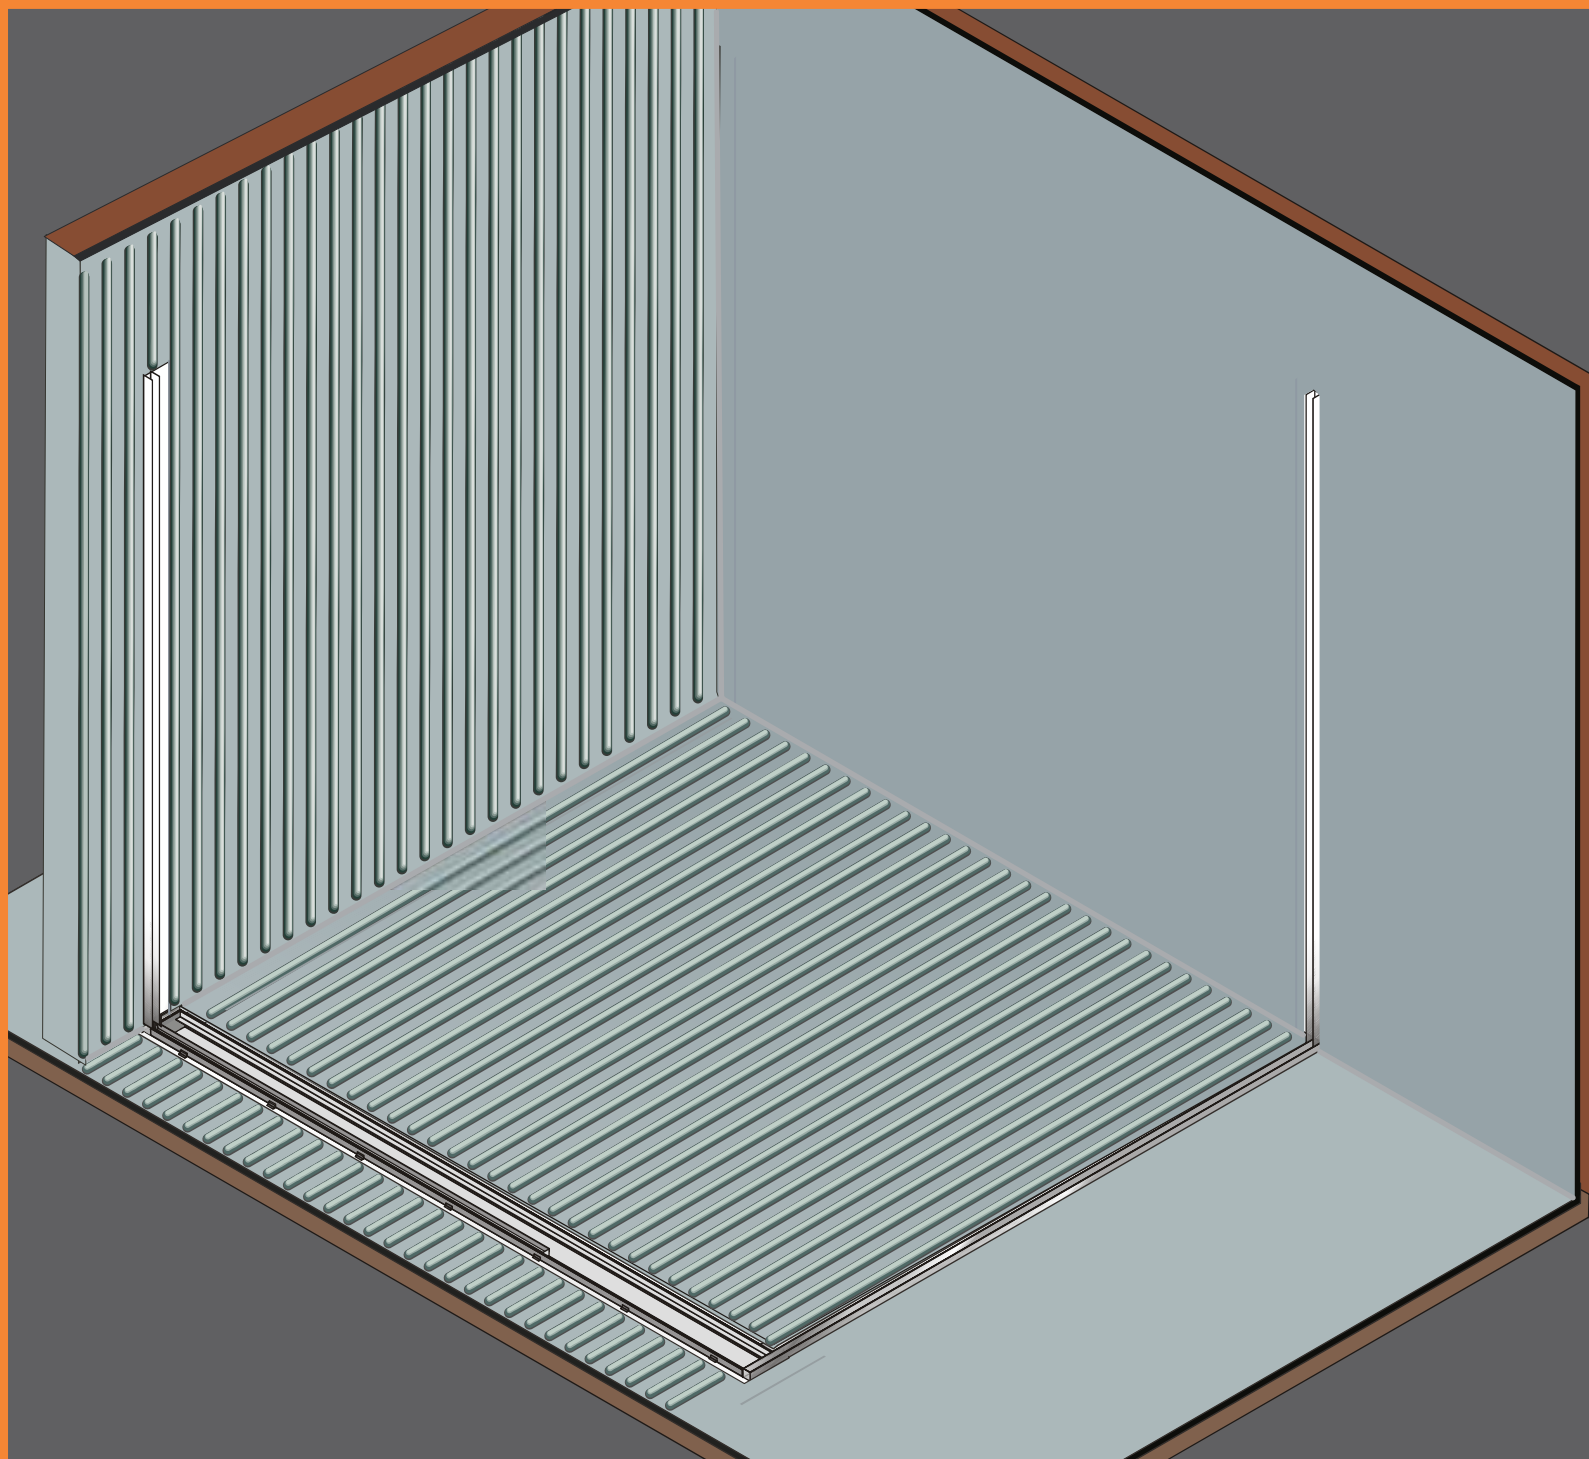


Apply tile adhesive per
manufacturers
instructions.



Creative Drain Solutions™

STEP

13

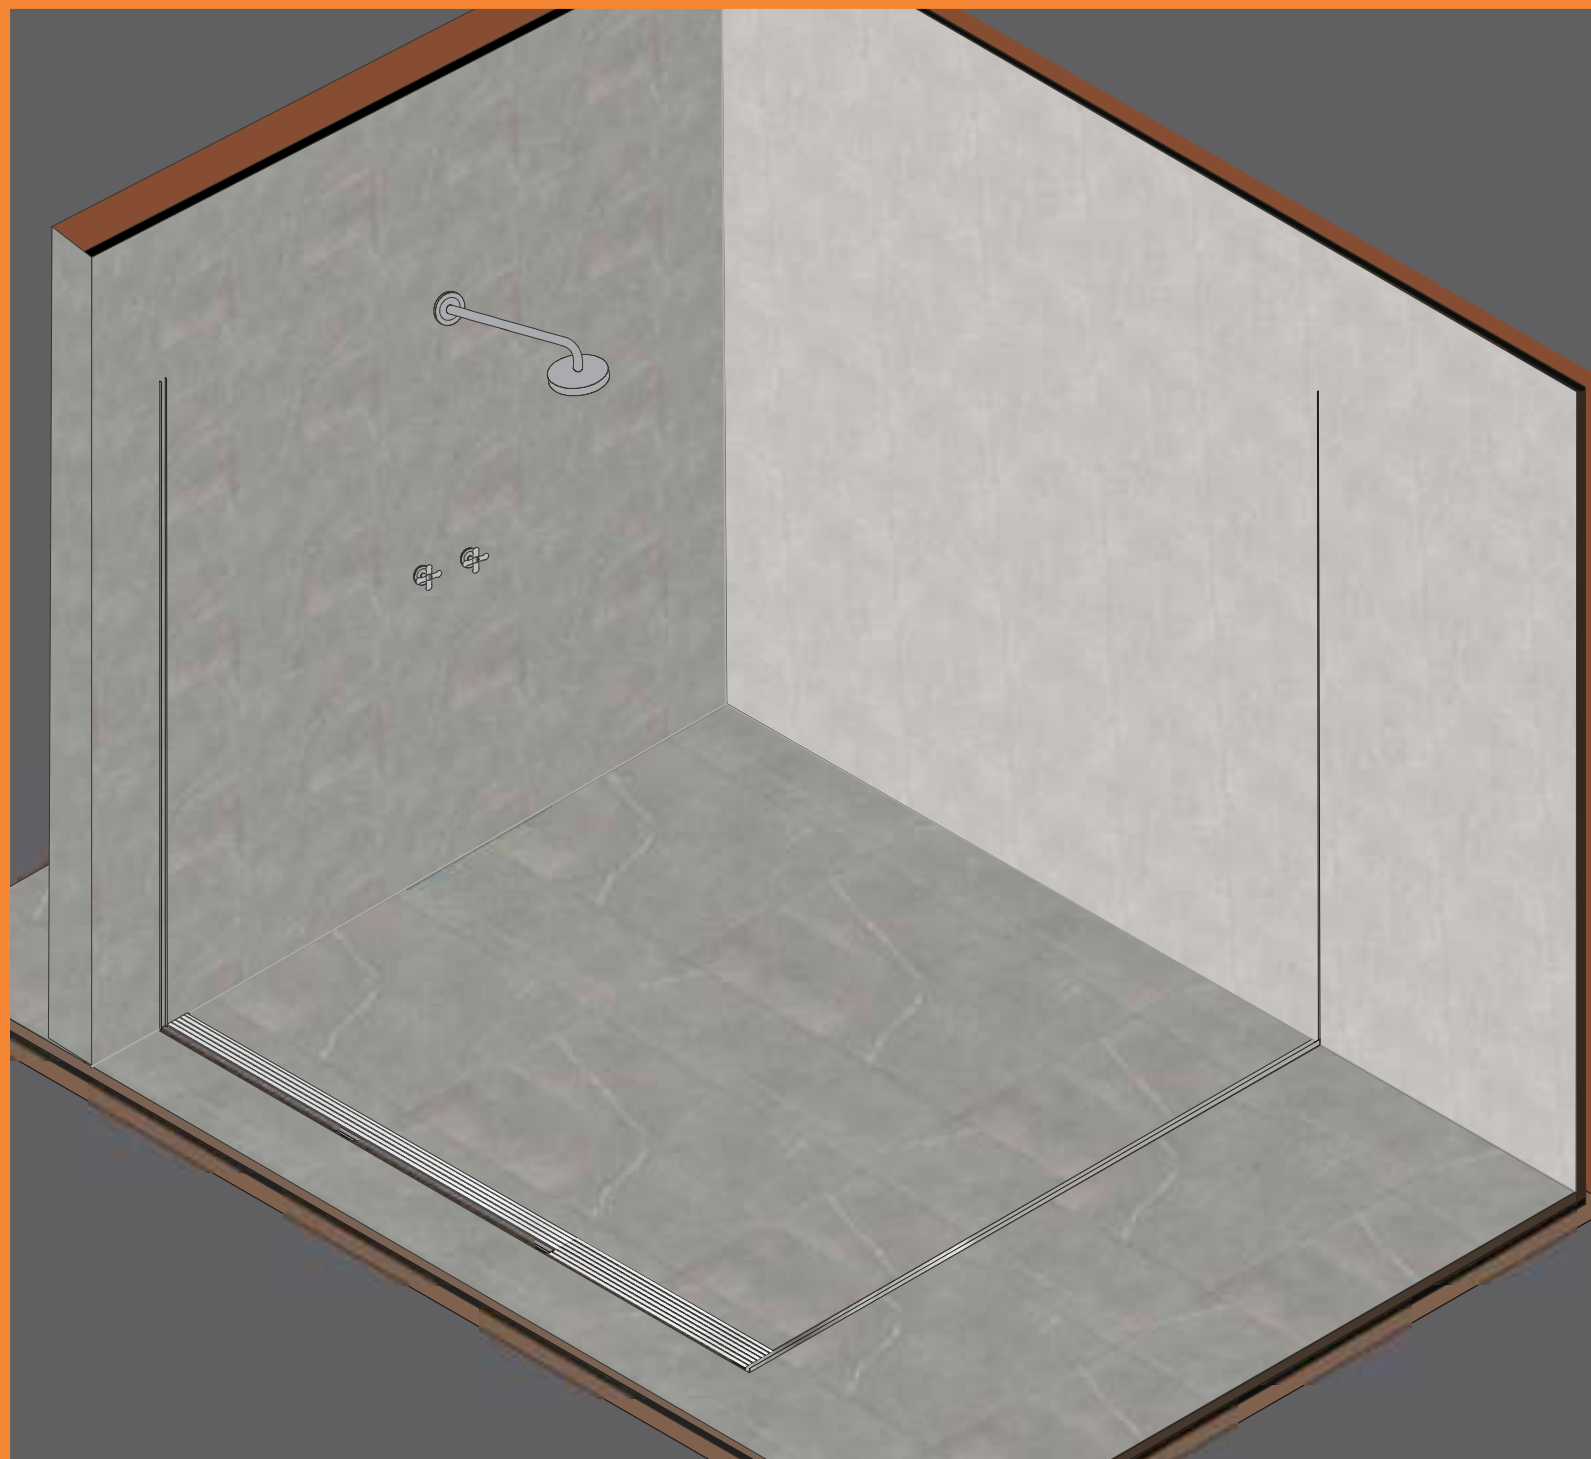

Lay tiles, ensuring there is a 3mm gap between a tile edge and the tile lip.

Maintain a 3mm gap with a removable MDF sheet or similar. When mortar and grout are dry, remove 3mm spacer and clean the area.


Apply and install color matched silicone between the tile edge and stainless steel lip.



Creative Drain Solutions™

STEP

14

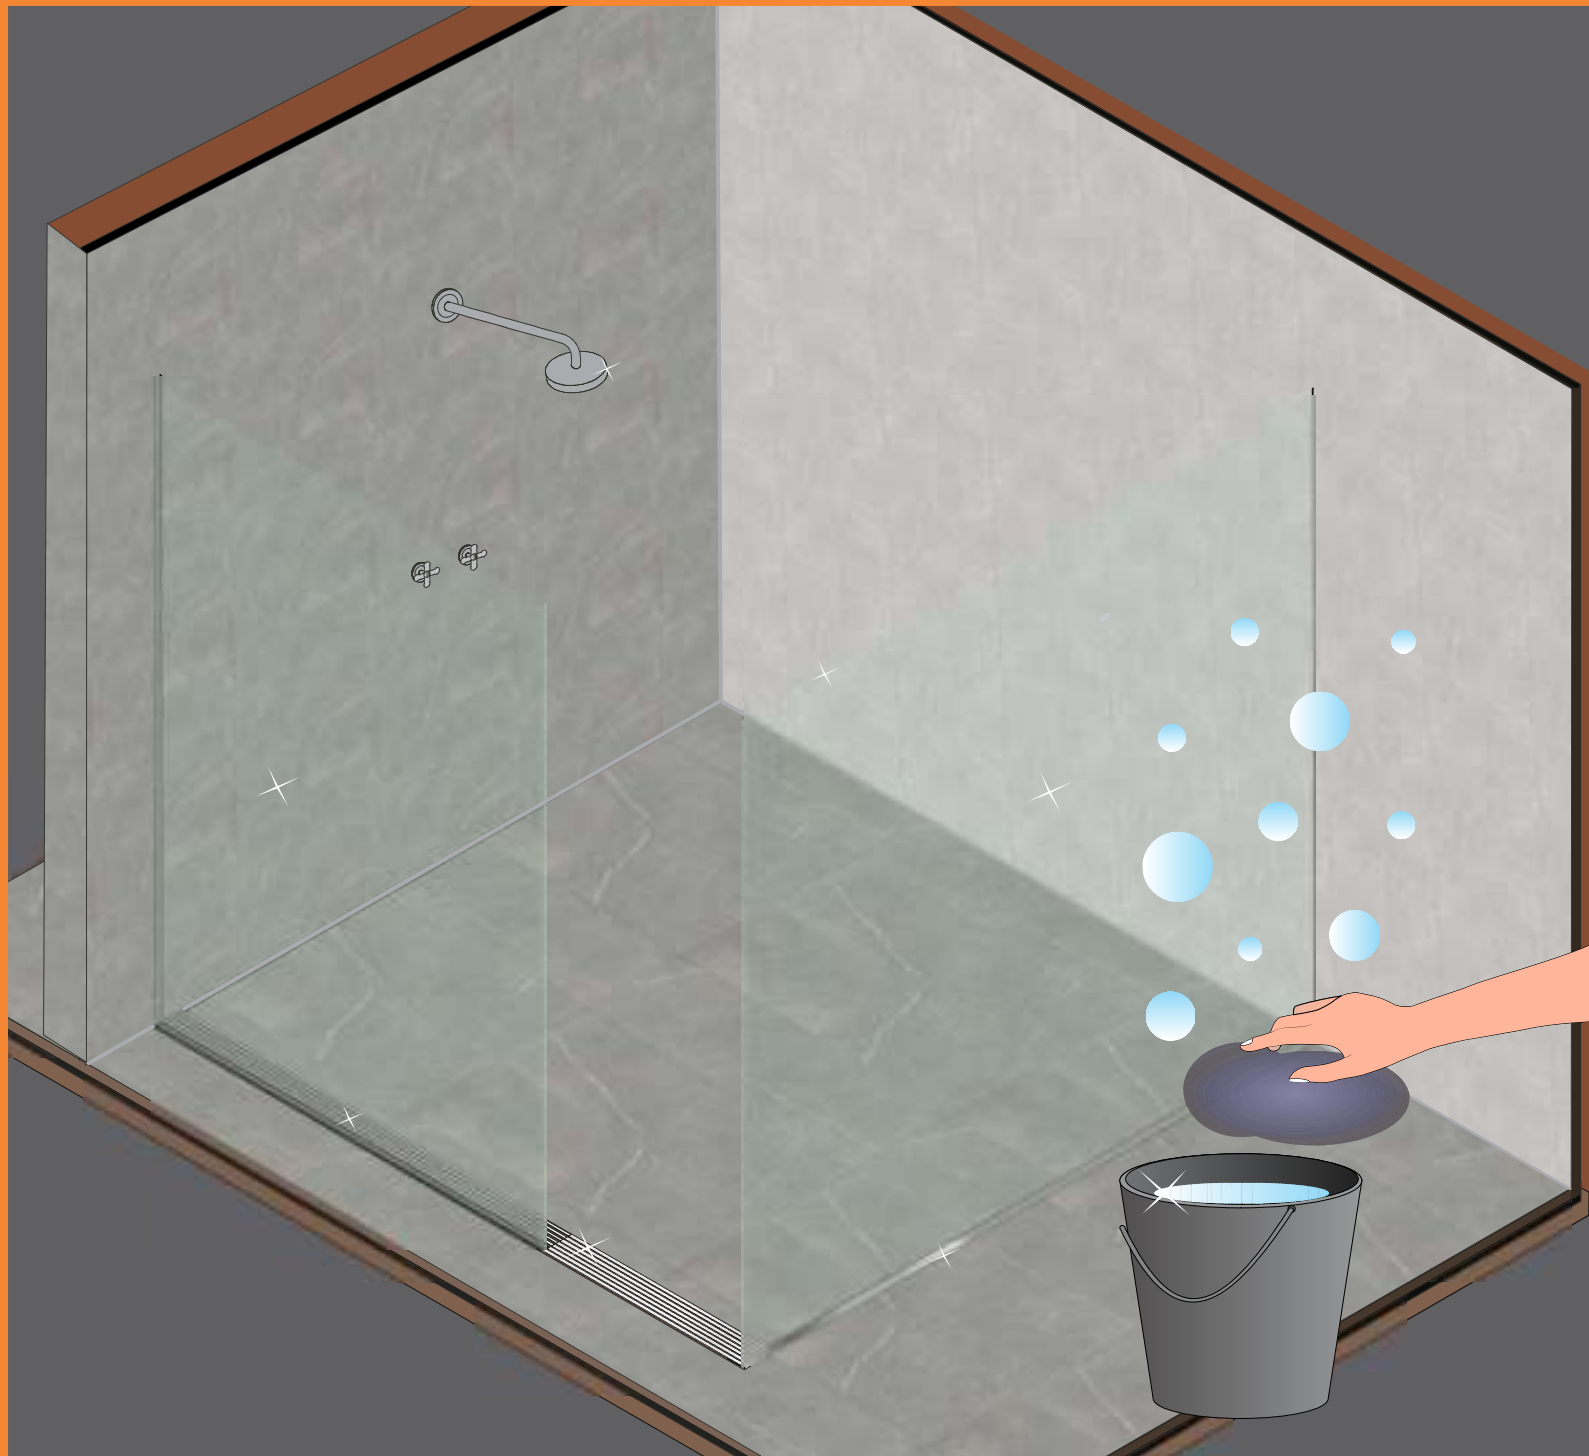

Give the tile and drain a clean with warm soapy water to ensure no dirt or debris remains and rinse with warm water.

Fit glass and grate in place and rinse clean.

Now you can enjoy your new Creative Drain and tiled wet area.