



# Installation Guide


## Slot Drain Cover

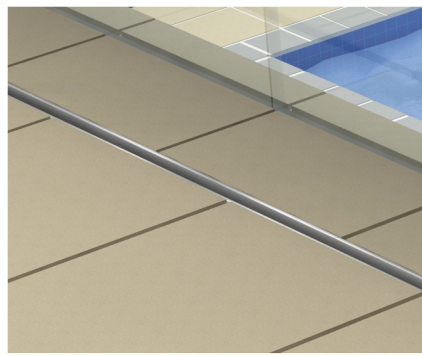


Creative Drain Solutions™

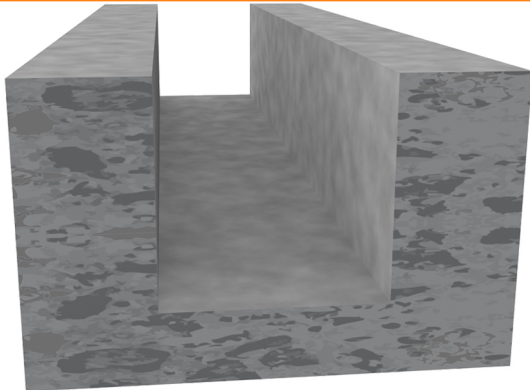


**Step 1** Leave a rebate in Concrete for your drain channel.

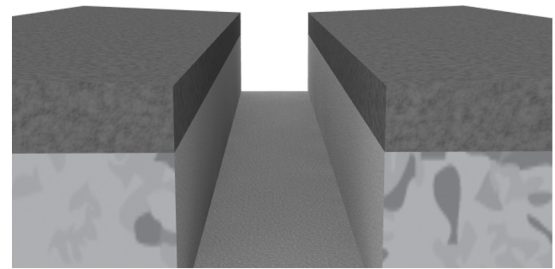


**Step 2** Screed either side of the rebate to create fall toward the channel.

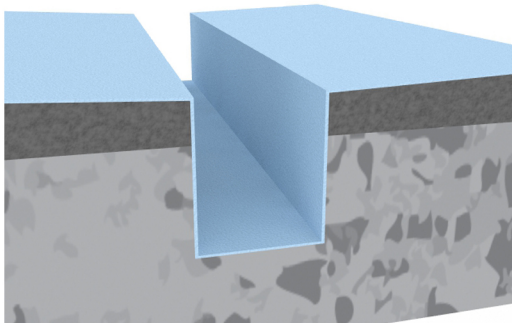


**Step 3** Allow screed to dry then waterproof the top of the screed and inside the channel.

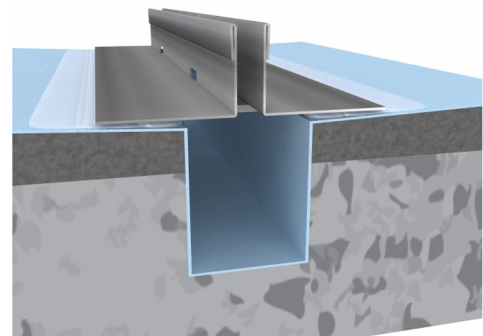

**Step 4** Place the slot down and press firmly to spread silicone creating a waterproof seal.

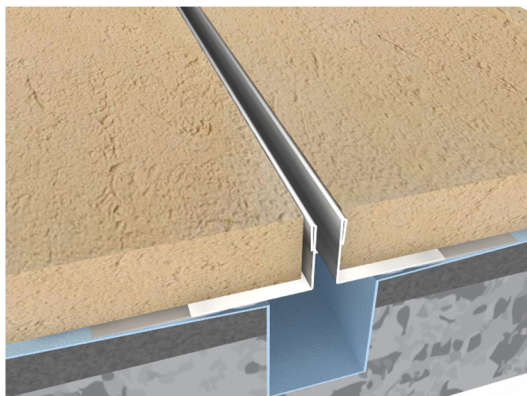

**Step 5** Pave above your slot to complete the installation.

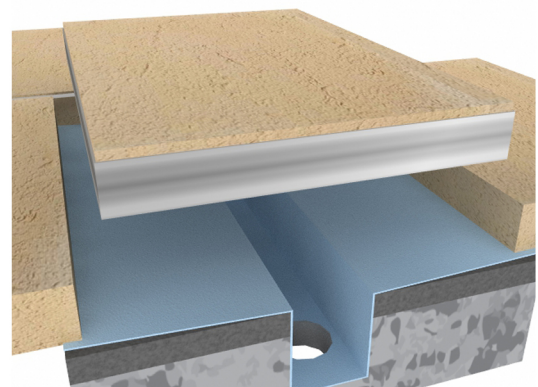

**Step 6** Removable Tile Insert tray allows for easy access and cleaning of drain.